

## BIS V-6108-048-C \_ \_ \_

Technical Reference, Operating Manual



**[www.balluff.com](http://www.balluff.com)**

<b>1</b>	<b>User Instructions</b>	<b>4</b>
1.1	About This Manual	4
1.2	Typographical Conventions	4
1.3	Symbols	4
1.4	Meaning of Warnings	4
1.5	Abbreviations	5
<b>2</b>	<b>Safety</b>	<b>6</b>
2.1	Intended Use	6
2.2	General Safety Notes	6
<b>3</b>	<b>Basic Knowledge</b>	<b>7</b>
3.1	Operating Principle of Identification Systems	7
3.2	Product Description	7
3.3	Control Function	8
3.4	Data Integrity	8
3.5	Read/Write Heads H1...H4	9
3.6	PROFINET	9
3.7	IO-Link	10
3.8	Communication Mode	10
3.9	USB Port	10
<b>4</b>	<b>Installation</b>	<b>11</b>
4.1	Processor Unit Scope of Delivery	11
4.2	Processor Unit Installation	11
4.3	Electrical Connections	12
<b>5</b>	<b>Technical Data</b>	<b>15</b>
<b>6</b>	<b>Startup</b>	<b>17</b>
6.1	Configuration	18
6.2	Parameter Configuration	21
6.3	Integration into Project Planning Software	29
<b>7</b>	<b>Device Functions</b>	<b>33</b>
7.1	Function Principle of the BIS V-6108	33
7.2	Process Data Buffer	34
7.3	Function Indicator	74
7.4	Examples	76
7.5	Display	90
7.6	Webserver	99
	<b>Appendix</b>	<b>105</b>
	<b>Index</b>	<b>107</b>

## 1 User Instructions

### 1.1 About This Manual

This manual describes the processor unit for BIS V-6108 Identification Systems and startup instructions for immediate operation.

### 1.2 Typographical Conventions

The following conventions are used in this manual:

#### Actions

Action instructions are indicated by a preceding triangle. The result of an action is indicated by an arrow.

- ▶ Action instruction 1.  
⇒ Action result.
- ▶ Action instruction 2.

#### Syntax

##### Numbers:

- Decimal numerals are shown without an additional indicator (e.g. 123).
- Hexadecimal numerals are shown with the additional indicator <sub>hex</sub> (e.g. 00<sub>hex</sub>).

##### Parameters:

Parameters are shown in italics (e.g. CRC\_16).

##### Directory paths:

References to paths where data is stored or is to be saved are shown in small caps (e.g. PROJECT:\DATA TYPES\USER-DEFINED).

##### Control characters:

Control characters for sending are set in angle brackets (e.g. <ACK>).

##### ASCII code:

Characters transmitted in ASCII code are set in apostrophes (e.g. 'L').

### 1.3 Symbols



#### Note, tip

This symbol indicates general notes.

---

### 1.4 Meaning of Warnings

Warning notes are especially safety-relevant and are used for accident avoidance. This information must be read thoroughly and followed exactly. The warning notes are constructed as follows:



#### SIGNAL WORD

##### Type and source of the hazard

##### Consequences of non-observance

- ▶ Measures for hazard avoidance
- 

The signal words used have the following meaning:

#### NOTICE

The warning word NOTICE indicates a risk which can result in **damage to or destruction of the product**.

#### CAUTION

The general warning symbol combined with the signal word CAUTION indicates a risk which can result in **slight or moderate injuries**.

#### WARNING

The general warning symbol combined with the signal word WARNING indicates a risk which can result in **serious injury or death**.

#### DANGER

The general warning symbol combined with the signal word DANGER indicates a risk which can result **directly in serious injury or death**.

---



## **1** User Instructions

### **1.5 Abbreviations**

BIS	Balluff Identification System
CP	Code Present
CRC	Cyclic Redundancy Check
DCP	Discovery and basic Configuration Protocol
DID	Device ID
DP	Decentralized peripherals
EEPROM	Electrical Erasable and Programmable ROM
EIRP	Equivalent Isotropically Radiated Power
EMC	Electromagnetic compatibility
ERP	Effective Radiated Power
EPC	Electronic Product Code
FCC	Federal Communications Commission
FE	Functional ground
GSD	General Station Description
GSDML	GSD Markup Language
IP	Internet Protocol
LF CR	Line Feed with Carriage Return
MAC	Media Access Control
n. c.	not connected
PC	Personal Computer
PROFINET	Process Field Network
RSSI	Receive Signal Strength Indicator
PLC	Programmable Logic Controller
Tag	Data carrier
TID	Tag identifier
UHF	Ultra high frequency
UID	Unique Identifier
VID	Vendor ID

## **2** Safety

### **2.1 Intended Use**

The BIS V-6108 processor unit is a component of the BIS V identification system. It is used for linking to a host computer (PLC, PC) within the identification system. It may be used only for this purpose in an industrial environment corresponding to Class A of the EMC Law.

This reference manual applies to processor units in the following series:

- BIS V-6108-048-C002
- BIS V-6108-048-C102
- BIS V-6108-048-C007
- BIS V-6108-048-C107

### **2.2 General Safety Notes**

#### **Installation and Startup**

Installation and startup are to be performed by trained technical personnel only. Any damage resulting from unauthorized manipulation or improper use voids the warranty and any liability claims against the manufacturer.

When connecting the processor unit to an external controller, observe proper selection and polarity for the connection as well as the power supply (see “Installation” on page 11).

The processor unit may only be used with an approved power supply (see “Technical Data” on page 15).

#### **Conformity**



This product was developed and manufactured in accordance with the applicable European directives. CE conformity has been verified.

---

All approvals and certifications are no longer valid if:

- Components are used that are not part of the BIS V Identification System,
- Components are used that have not been explicitly approved by Balluff.

#### **Operation and testing**

The operator is responsible for ensuring that local safety regulations are observed.

In the event of defects and non-correctable faults in the identification system, take the system out of service and secure it to prevent unauthorized use.

**3 Basic Knowledge**

**3.1 Operating Principle of Identification Systems**

The BIS V Identification System is classified as a non-contact system with read and write capabilities. This makes it possible to not only convey information that is programmed permanently in the data carrier, but also to collect and pass on current information.

The main components of the BIS V Identification System are:

- Processor unit,
- Read/write head (R/W head)
- Data carrier.

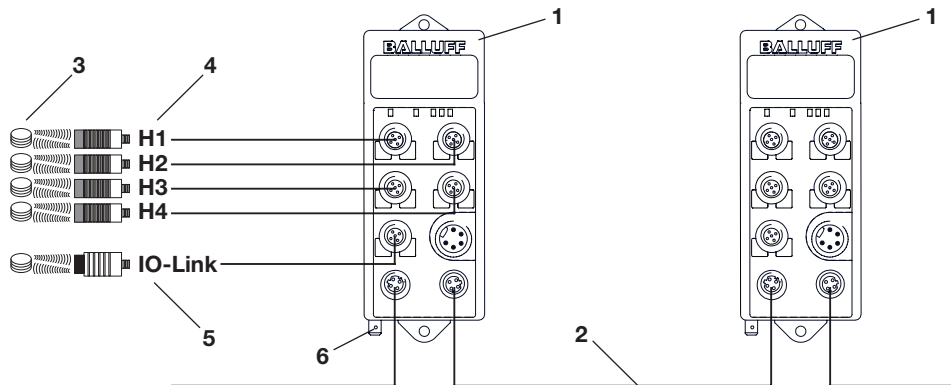


Figure 1: System Overview

- |  |                                   |
|--|-----------------------------------|
| <b>1</b> BIS V                               | <b>4</b> Read/Write Heads H1...H4 |
| <b>2</b> PROFINET IO                         | <b>5</b> Service/IO-Link          |
| <b>3</b> Data carriers (max. 1 per R/W head) | <b>6</b> Functional ground        |

The main areas of use are:

- In manufacturing for controlling material flow (e.g. for model-specific processes, for workpiece transport using conveying systems, for acquiring safety-related data,
- In warehouse areas for monitoring inventory movement,
- In the transportation sector and in materials handling.

**3.2 Product Description**

Processor Unit BIS V-6108:

- Metal housing
- Round connector terminations
- Four read/write heads can be connected
- 1 × IO-Link module or standard input port can be connected
- Power for the system components provided by the processor unit
- Power for the data carrier provided by the read/write heads via carrier signal
- USB Port
- 2 × PROFINET IO port
- Display with keys for startup and configuration
- Control displays
- Webserver for diagnostics and service functions

### **3** Basic Knowledge

#### **3.3 Control Function**

The processor unit is the link between data carrier and host control system. It manages two-way data transfer between data carrier and R/W head and provides buffer storage.

The processor unit uses the R/W head to write data from the host control system to the data carrier or reads the data from the carrier and makes it available to the host control system.

Host control systems could include:

- A control computer (e.g. industrial PC)
- A PLC.

##### **Double Bit Header:**

In order to ensure complete transmission of all data in the data buffer, the control bits in the data buffer's first and last byte (bit header) are transmitted and compared for each R/W head. If both bit headers are the same, then the data has been fully updated and can be transmitted. This means that the data for each R/W head is only valid if both bit headers are the same. Thus, the host control system must also compare the bits in the bit headers.

#### **3.4 Data Integrity**

In order to increase data integrity, data transfer between the data carrier and processor unit and the storage device must be monitored using a check procedure.

A CRC\_16 data check can be enabled for this via parameter configuration.

With the CRC\_16 data check, a check code that allows the validity to be checked at any time is written to the data carrier.

##### **A CRC\_16 data check provides the following advantages:**

- Data integrity even during the non-active phase (data carrier outside the R/W head).
- Shorter read time – page is read once.

**3 Basic Knowledge**

**3.5 Read/Write Heads H1...H4**

For BIS V-6108-048-C002, read/write heads in the BIS VM-3 \_\_\_, BIS VL-3 \_\_\_, and BIS VU-3 \_\_\_ series can be connected to terminals H1...H4. BIS V-6108-048-C102 also supports read/write heads in the BIS C-3 \_\_\_ series (Adapter required).

**i Note**  
 Read/write heads in the BIS VU-3 \_\_\_ series are only supported with a device software version of 3.0 or higher. Should the occasion arise, an update will be required.

**i Note**  
 Device software as well as manuals with detailed information about the read/write heads used are available at [www.balluff.com](http://www.balluff.com).

BIS V processor units are available in different variants with respect to the supported read/write heads. The following table shows the differences.

Processor Unit	Available Connections H1...H4	Compatible Read/Write Heads			
		VM-3 __	VL-3 __	VU-3 __	C-3 __
BIS V-6108-048-C002	H1...H4	YES	YES	YES	NO
BIS V-6108-048-C102	H1...H4	YES	YES	YES	YES
BIS V-6108-048-C007	H1...H4	YES	YES	YES	NO
BIS V-6108-048-C107	H1...H4	YES	YES	YES	YES

**i Note**  
 Only shielded cables are to be used for connecting read/write heads!  
 An adapter cable is required for connecting read/write heads in the BIS C-3 \_\_\_ series.  
 The maximum cable length for read/write heads in the BIS VM-3 \_\_\_, BIS VL-3 \_\_\_, and BIS VU-3 \_\_\_ series is 50 m. For the BIS C-3 \_\_\_ series, the cable length is set at 1 m, 5 m, or 10 m plus the adapter depending on the design of the system.

**i Note**  
 Visit [www.balluff.com](http://www.balluff.com) for more information on available software and accessories.

**3.6 PROFINET**

Open bus system for process and field communication in cell networks with few nodes and for data communication in accordance with IEC 61158/EN 50173. Automation devices, such as PLCs, PCs, operating and observation devices, sensors or actuators, can communicate using this bus system. PROFINET IO is used in the BIS V-6108.

### **3** Basic Knowledge

#### **3.7 IO-Link**

IO-Link is defined as a standardized point-to-point connection between sensors/actuators and an I/O module. An IO-Link sensor/actuator can send additional communication data (e.g. diagnostics signals) in addition to the binary process signals over the IO-Link interface.

Compatibility with standard I/O:

- IO-Link sensors/actuators can be connected to existing I/O modules.
- Sensors/actuators that are not IO-Link-capable can be connected to an IO-Link module.
- Standard sensor/actuator cables can be used

Key technical data:

- Serial point-to-point connection
- Communication as an add-on to the standard I/O
- Standard I/O connection technology, unshielded, 20 m cable length.
- Communication using 24 V pulse modulation, standard UART protocol

#### **3.8 Communication Mode**

Process data (cyclical):

The GSDML file provides combined input/output modules (8 bytes...254 bytes) for mapping the sensors:

- Combined input/output modules (8 bytes...254 bytes)

Service data (diagnostics, parameters):

- Parallel and non-reactive to process data

#### **Standard I/O mode**

- Startup parameters can be configured using communication, then
- Binary switching signal

#### **3.9 USB Port**

The device can be connected to a computer's USB port using the "Service/IO-Link" jack and then behaves like a USB stick. This allows access to the internal memory, where the manual, the GSDML file and a communications driver for service functions are saved. In addition, the BIS V has to be connected to a voltage source. The communication driver can be installed as needed, but is not required for the USB port and BIS V to function.



#### **Note**

Visit [www.balluff.com](http://www.balluff.com) for more information on available software and accessories.

---

## 4 Installation

### 4.1 Processor Unit Scope of Delivery

Included in the scope of delivery:

- BIS V-6108
- 5 × closure cap
- Safety Precautions



**Note**

Visit [www.balluff.com](http://www.balluff.com) for more information on available software and accessories.

### 4.2 Processor Unit Installation

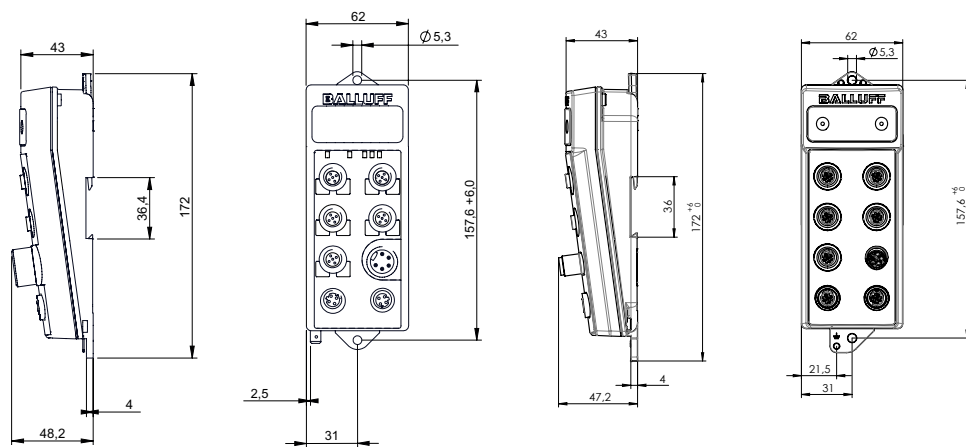


Figure 2: Mechanical connection (dimensions in mm)

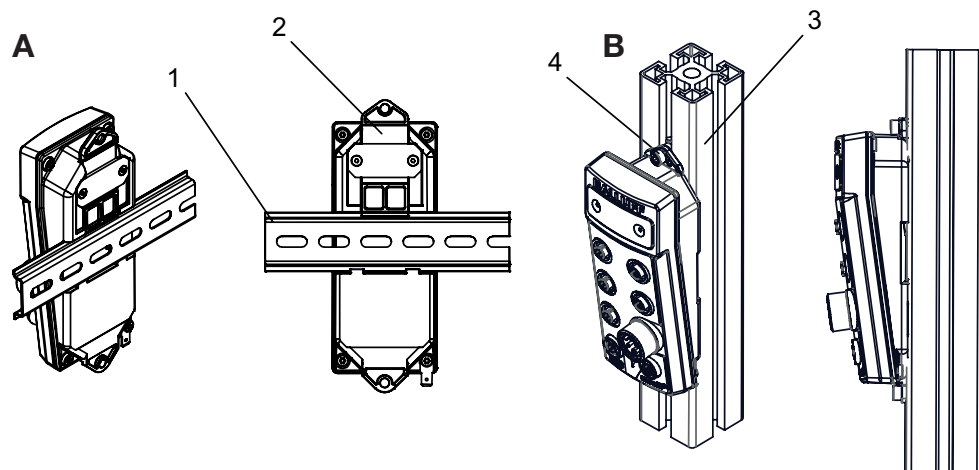


Figure 3: Installation examples (A: attachment to DIN rails, B: attachment to T-slotted framing)

- |  |   |
|--|---|
| <p><b>1</b> DIN rail</p> <p><b>2</b> Fastening</p> | <p><b>3</b> T-slotted framing</p> <p><b>4</b> Holder for screw mounting</p> |
|--|---|

- ▶ Select a suitable installation position.
- ▶ Secure the processor unit using two M5 screws (strength category 8.8, lightly oiled, tightening torque M = 5.5 Nm).

**4** Installation

**4.3 Electrical Connections**



**Note**

Make the ground connection either directly or using an RC combination to ground.

**BIS V-6108-048-C\_02**

**Connections**


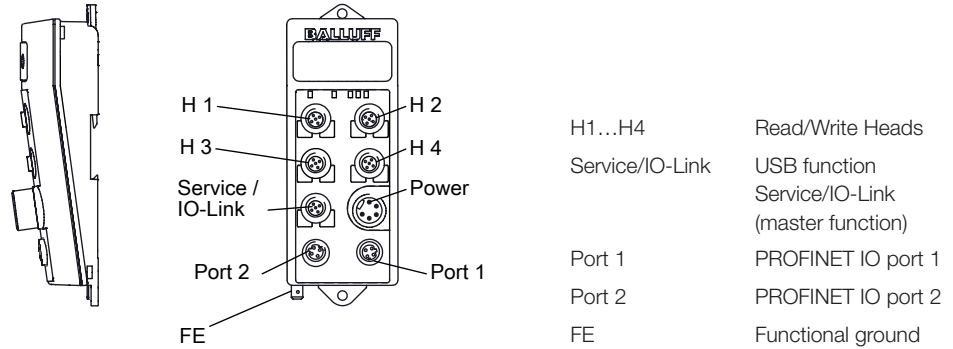


Figure 4: Electrical Connections

**H1...H4**


M12 female, 5-pin, A-coded

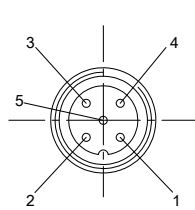

PIN	Function
1	+24 V DC
2	A
3	0 V
4	B
5	n.c.

**Power**


7/8" male, 5-pin

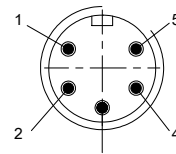

PIN	Function
1	0 V
2	0 V
3	FE
4	+24 V DC
5	Reserved, not connected

**IO-Link / Service**

M12 female, 5-pin, A-coded

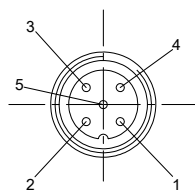

PIN	Function
1	VP (+24 V DC)
2	n. c.
3	0 V
4	Q/C (IO-Link) or digital input
5	n. c.

Service

PIN	Function
1	n. c.
2	USB-
3	0 V
4	n. c.
5	USB+



**NOTICE**

**Damage to the USB interface**

**Standard USB cables can damage the USB interface on the PC.**


- Use the cable BCC0CR2 for the use of the Balluff Software BIS Cockpit or UHF Manager on the Port IO-Link / Service.



**4** Installation

**PROFINET IO port 1/2**

M12 female, 4-pin, D-coded

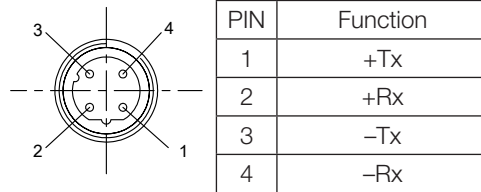

**BIS V-6108-048-C\_07**

**Connections**


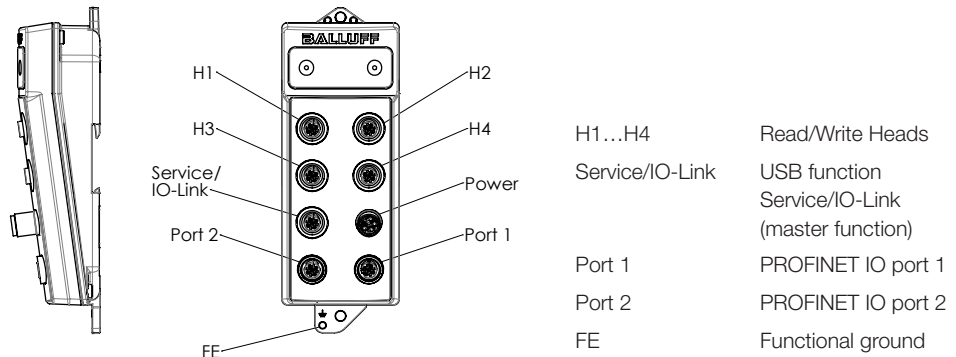


Figure 5: Electrical Connections


**H1...H4**

M12 female, 5-pin, A-coded

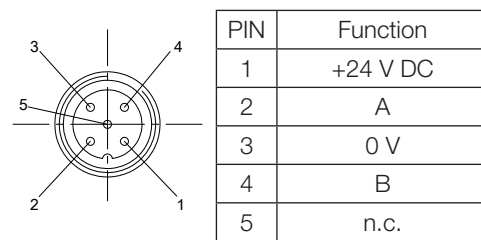



**Power**

M12 male, 5-pin, L-coded

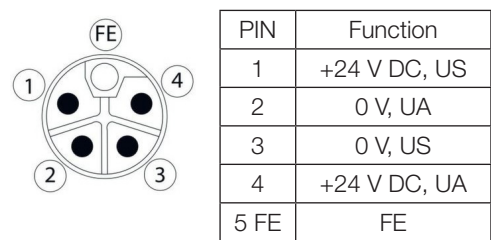

**IO-Link / Service**

M12 female, 5-pin, A-coded

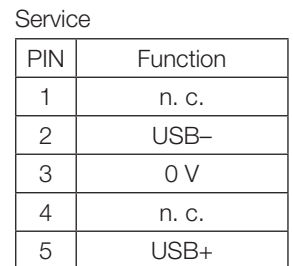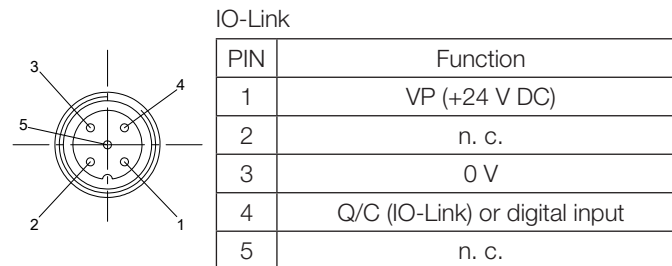

**NOTICE**

**Damage to the USB interface**


**Standard USB cables can damage the USB interface on the PC.**

- Use the cable BCC0CR2 for the use of the Balluff Software BIS Cockpit or UHF Manager on the Port IO-Link / Service.

## 4 Installation

### PROFINET IO port 1/2

M12 female, 4-pin, D-coded

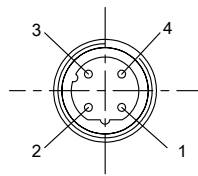

PIN	Function
1	+TX
2	+Rx
3	-Tx
4	-Rx

**5** Technical Data

**Dimensions**

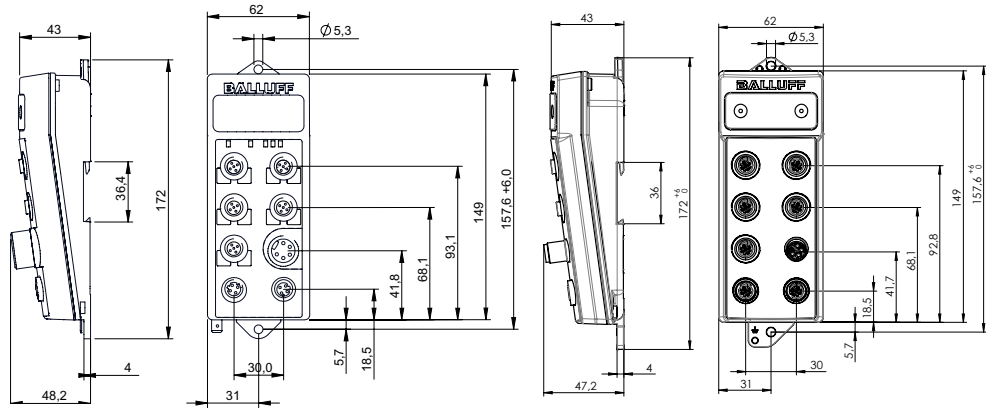


Figure 6: Dimensions in mm

**Mechanical Data**

Housing material	Zinc die-cast housing
H1...H4	V <sub>S</sub> 24 V DC - M12 female, 5-pin, A-coded
Service/IO-Link (master function)	M12 female, 5-pin, A-coded
Power BIS V-6108-048-C_02 BIS V-6108_048-C_07	7/8" male, 5-pin M12 male, 5-pin, L-coded
PROFINET IO port 1	M12 female, 4-pin, D-coded
PROFINET IO port 2	M12 female, 4-pin, D-coded
Protection Class	IP65 (with connectors)
Weight	800 g

**Electrical Data**

Operating Voltage V <sub>S</sub>	24 V DC ±20% LPS Class 2
Ripple	≤ 10%
Power Consumption	≤ 2 A
Application interfaces	PROFINET IO, IO-Link

**Application interfaces**

**IO-Link port M12, A-coded, female**

Pin 1	+24 V DC, 1 A
Pin 2	USB+
Pin 3	0 V
Pin 4	IO-Link / input max. 500 mA
Pin 5	USB-

**5** Technical Data

**Operating conditions**

Ambient Temperature	0 °C...+60 °C
Storage Temperature	0 °C...+60 °C
EMC (BIS V-6108-048-C002)	
– EN 61000-6-2	
– EN 61000-4-2/4/5/6	– Severity level 2B/3A/2A/3A
– EN 61000-4-3	
80 MHz – 1000 MHz	– Severity level 3A
1400 MHz – 2000 MHz	– Severity level 3A
2000 MHz – 2700 MHz	– Severity level 2A
– Emission as per EN 55016-2-3	– EN 61000-6-3
EMC (BIS V-6108-048-C102)	
– EN 61000-6-2	
– EN 61000-4-2/4/5/6	– Severity level 2B/2A/1A/2A
– EN 61000-4-3	
80 MHz – 1000 MHz	– Severity level 3A
1400 MHz – 2000 MHz	– Severity level 3A
2000 MHz – 2700 MHz	– Severity level 2A
– Emission as per EN 301489-1/-3	– EN 55022 (class A)
Vibration/shock	EN 60068 Part 2-6/27

## 6 Startup

### PROFINET IO

The BIS V-6108 processor unit and the controlling system communicate via PROFINET IO. The system PROFINET IO consists of the following components:

- IO controller
- IO device (here, the BIS V-6108 processor unit)

In a PROFINET network, IO controllers and IO devices can be connected to each other using all common network topologies: a radial, linear, ring or tree topology is possible.



#### Note

The BIS V-6108 has a built-in IRT switch with 2 ports for this purpose. This means that both RT and IRT can be used.

---

### Device master data

In order to configure the parameters for the IO controller correctly based on type, the device master data for the BIS V-6108 processor unit are included in the form of a GSD file. The data can be found in the processor unit's internal memory and can be retrieved from there via the USB port.

### Input/output buffer

The data exchange takes place with the host control system in the input and output buffers buffer. The size of these buffers must be configured by the master.



#### Note

The possible buffer sizes for each read/write head are stored in the GSDML file. A minimum size of 8 and a maximum size of 254 bytes can be configured; the value must always be an even number. The maximum total buffer size of 1440 bytes must not be exceeded.

---

### Device name and IP address

The processor unit and the host system communicate via the PROFINET protocol. This means an IP address and a unique device name are required. The device name and the IP address can be edited using the respective project planning software used, e.g. "Simatic Manager" and the IO device.



#### Note

The BIS V-6108 processor unit is shipped without a device name. The GSDML file has the prepared device name "bisv6108048".

---

### Display setting/ menu navigation

The device can be restored to factory condition using the display. Details for resetting and on menu guidance of the display are described in Chapter "[Display](#)" on page 90.

**6** Startup

**6.1 Configuration**

In project planning for PROFINET devices, a device is mapped as a modular system that consists of a "BIS V-6108" header module and multiple data modules.

**GSDML file**

The device data required for project planning is stored in GSDML files (General Station Description). The data modules of each read/write head, each IO-Link port and possible additional modules are represented in the project planning software relative to their slot. The GSDML file makes the possible data modules (inputs/outputs for the read/write heads and the IO-Link port for various data widths) available. Appropriate data modules are assigned to a specific slot for configuring the V-6108.

The "BIS V-6108" header module always has to be plugged in at slot 0.  
 The data modules for the 4 read/write heads can be plugged in at slots 1 to 4. Depending on use, an IO-Link port, a standard I/O, an IO-Link data module or an SIO module can be plugged in at slot 5.

Slot	Module	Function
0	BIS V-6108 header module	Parameter configuration, no process data
1	Read/write head	Parameter configuration and process data
2	Read/write head	
3	Read/write head	
4	Read/write head	
5	IO-Link port pin 4	IO-Link data modules of various data width or configurable as a standard input port
6	Communication status	Slots for optional additional modules
7	Sensor short circuit	
8	Actuator overvoltage	
9	Input pin 4	
10	Output pin 4	
11	Restart Pin 4	

**6** Startup

**Coding IO-Link  
Data Modules**

**Data modules for standard input ports:**

Data module	Data width
Standard I/O	See "Auxiliary Modules" on page 20

**Data modules for IO-Link\_inputs**

Data module	Data width
IOL_I_1byte	1 byte
IOL_I_2byte	2 bytes
IOL_I_4byte	4 Byte
IOL_I_6byte	6 Byte
IOL_I_8byte	8 Byte
IOL_I_10byte	10 Byte
IOL_I_16byte	16 Byte
IOL_I_24byte	24 Byte
IOL_I_32byte	32 Byte

**Data modules for IO-Link\_outputs**

Data module	Data width
IOL_O_1byte	1 byte
IOL_O_2byte	2 bytes
IOL_O_4byte	4 Byte
IOL_O_6byte	6 Byte
IOL_O_8byte	8 Byte
IOL_O_10byte	10 Byte
IOL_O_16byte	16 Byte
IOL_O_24byte	24 Byte
IOL_O_32byte	32 Byte

**6** Startup

**Coding IO-Link  
Data Modules**

**Data modules for IO-Link\_inputs\_outputs**

Data module	Data width	
	Input	Output
IOL_I/O_1/_1byte	1 byte	1 byte
IOL_I/O_2/_2byte	2 bytes	2 bytes
IOL_I/O_2/_4byte	2 bytes	4 Byte
IOL_I/O_4/_4byte	4 Byte	4 Byte
IOL_I/O_4/_2byte	4 Byte	2 bytes
IOL_I/O_2/_8byte	2 bytes	8 Byte
IOL_I/O_4/_8byte	4 Byte	8 Byte
IOL_I/O_8/_2byte	8 Byte	2 bytes
IOL_I/O_8/_4byte	8 Byte	4 Byte
IOL_I/O_8/_8byte	8 Byte	8 Byte
IOL_I/O_10/_10byte	10 Byte	10 Byte
IOL_I/O_4/_32byte	4 Byte	32 Byte
IOL_I/O_32/_4byte	32 Byte	4 Byte
IOL_I/O_16/_16byte	16 Byte	16 Byte
IOL_I/O_24/_24byte	24 Byte	24 Byte
IOL_I/O_32/_32byte	32 Byte	32 Byte



**Note**

Project planning software of various providers mostly offers graphical assistance during configuration; the configuration string is automatically created.

**Auxiliary Modules**

Slot	Subslot	Input	Output	Contents
6	1	1 byte	-	Communication status
7	1	1 byte	-	Sensor short circuit
8	1	1 byte	-	Actuator overvoltage
9	1	1 byte	-	Input pin 4



**6** Startup

**6.2 Parameter Configuration**

Slot 0, Subslot 1

**Device Parameter**

Index	Byte	Bit	Length	Contents	Values	Default
1	0	0	1 Bit	Global diagnosis	0/1	0
	0	4	1 Bit	HMI read only	0/1	0
	0	5	1 Bit	LEDs off	0/1	0
2	0	0	1 byte	IO-Link port function	0/1/3/4/5/6	0
3	1	0	1 byte	IO-Link safe state	0/1	0

**RFID port parameter**

Slot 1 to 4, subslot 1 in each case

Index	Byte	Bit	Length	Contents	Values	Default
1	0	0	1 Bit	CRC	0/1	0
	0	1	1 Bit	Dynamic mode*	0/1	0
	0	2	1 Bit	Type serial number	0/1	0
	0	3	1 Bit	Slow tag detection*	0/1	0
	0	4	1 Bit	Low antenna power*	0/1	0
	0	5	1 Bit	Head LEDs off	0/1	0
	1	0	1 byte	UID Compare Count (only BIS VL-3 _ _)	1...7	2
	2	0	1 byte	Tag type	Data Carrier Type 0: All data carriers in the series used (e.g. BIS VM) are recognized* 10: Mifare 11: ISO 15693 20: EM4x02 21: Hitag1 22: HitagS 30: BIS C 32 byte 31: BIS C 64 byte	1
2	0	0	16 bits	Process data length	8...254	Fixed per module

\* Not for read/write heads BIS VU- \_ \_

**6** Startup

**IO-Link port  
parameter**

Slot 5, subslot 1

Index	Byte	Bit	Length	Contents	Values	Default
1	0	0	6 bits	Cycle time	0...63	0
	0	6	2 bits	Cycle time base	0/1/2	0
2	0	0	1 byte	Data window offset	0...31	0
	1	0	1 byte	Max. data input length	0...32	0
3	0	0	2 bits	Validation type	0/1/2	0
	1	0	1 byte	Vendor ID Byte 0	0.255	0
	2	0	1 byte	Vendor ID Byte 1	0.255	0
	3	0	1 byte	Vendor ID Byte 2	0.255	0
	4	0	1 byte	Device ID Byte 0	0.255	0
	5	0	1 byte	Device ID Byte 1	0.255	0
	6	0	16 bits	Serial Number	String	Empty string
4	0	0	1 Bit	Parameter server upload	0/1	0
	0	1	1 Bit	Parameter server download	0/1	0
	0	6	2 bits	Parameter server enable	0/1/2	0
5	0	0	1 Bit	Diagnosis enable	0/1	0
	0	1	1 Bit	Diagnosis low voltage sensor	0/1	0
	0	2	1 Bit	Diagnosis low voltage actuator	0/1	0
	0	3	1 Bit	Actuator/sensor short circuit	0/1	0
6	0	0	1 byte	Process data length input	0...32	Fixed per module
	1	0	1 byte	Process data length output	0...32	Fixed per module

**6**

**Startup**

**Description of individual parameters**

- Global diagnostic** This function can be used to permit / suppress all of the module's diagnostics messages. (optical diagnostics signals are not affected)
- HMI read only** If this function is enabled, the device settings can no longer be reset via the display.
- LEDs off** If this function is enabled, the read/write head LEDs on the BIS V-6108 processor unit are shut off after 30 min. The parameters for this function are configured in the header module.
- IO-Link port function** Here, the function of the IO-Link port can be defined:
- |   |   |   |
|---|---|---|
| N/O Contact                               | = | Input as normally open contact  |
| N/C Contact                               | = | Input as normally closed contact  |
| IO-Link                                   | = | IO-Link function  |
| N/O Contact after Parameter Configuration | = | SIO mode; an IO-Link device can be configured via IO-Link and afterward switched over to an SIO mode in which the IO-Link port pin functions as a simple switch input |
| N/C Contact after Parameter Configuration | = | SIO mode, as with normally open after configuration, but as normally closed input   |
- IO-Link safe state** This function is an extension of the IO-Link port starting configuration. A safe state that the port is to take on in the case of a loss of bus communication can be predefined for the port.

**6** Startup

**Tag type**

The following data carriers are available for the BIS V-6108 processor unit.



**Note**

The data carriers contain additional memory ranges for configuration and protected data. These ranges cannot be processed using the BIS V-6108 processor unit.

**Mifare data carriers (for read/write heads BIS VM):**

Balluff data carrier type	Manufacturer	Description	Memory capacity	Memory type
BIS M-1__-01	NXP	Mifare Classic	752 bytes	EEPROM
BIS M-1__-10	NXP	Mifare Classic	736 bytes	EEPROM

**ISO 15693 data carriers (for read/write heads BIS VM):**

Balluff data carrier type	Manufacturer	Description	Memory capacity	Memory type
BIS M-1__-02	Fujitsu	MB89R118	2000 bytes	FRAM
BIS M-1__-03	NXP	SL2ICS20	112 bytes	EEPROM
BIS M-1__-04*	Texas Instruments	TAG-IT Plus	256 bytes	EEPROM
BIS M-1__-05*	Infineon	SRF55V02P	224 bytes	EEPROM
BIS M-1__-06*	EM	EM4135	288 bytes	EEPROM
BIS M-1__-07	Infineon	SRF55V10P	992 bytes	EEPROM
BIS M-1__-08*	NXP	SL2ICS530	160 bytes	EEPROM
BIS M-1__-09*	NXP	SL2ICS500	32 bytes	EEPROM
BIS M-1__-11	Balluff	BIS M-1	8192 bytes	FRAM
BIS M-1__-13	Balluff	BIS M-1	32768 bytes	FRAM
BIS M-1__-14	Balluff	BIS M-1	65536 bytes	FRAM
BIS M-1__-15	Balluff	BIS M-1	131072 bytes	FRAM
BIS M-1__-20	Fujitsu	MB89R112	8192 bytes	FRAM
BIS M-1__-21	Texas Instruments	RF37S114 HTFJB SLIX-L	32 bytes	EEPROM
BIS M-1__-22	NXP	SLIX-2	316 bytes	EEPROM
BIS M-1__-23	NXP	ICODE DNA SL256002	256 bytes	EEPROM

\* On request

**For read/write heads BIS VL:**

Balluff data carrier type	Manufacturer	Description	Memory capacity	Memory type
BIS L-1__-01	NXP	Hitag1	192 bytes	EEPROM
BIS L-2__-03	EM	EM4x02	5 bytes (read-only)	—
BIS L-1__-05	NXP	HitagS	192 bytes	EEPROM

**6** Startup

**For read/write heads BIS C (with adapter):**

Balluff data carrier type	Manufacturer	Memory capacity	Memory type	Memory organization
BIS C-1__-04	Balluff	511 Byte	EEPROM	32-byte blocks
BIS C-1__-05	Balluff	1023 Byte	EEPROM	32-byte blocks
BIS C-1__-11	Balluff	2047 Byte	EEPROM	64-byte blocks
BIS C-1__-32	Balluff	8192 Byte	FRAM	64-byte blocks

**Tag type**



**Note**

To achieve the read times during dynamic operation that are specified on [page 73](#) the Tag Type parameter must be set to "BIS C 32 Byte" or "BIS C 64 Byte" on the respective head.

**For read/write heads BIS VU:**

Balluff data carrier type	Manufacturer	Memory capacity
BIS U-1__	Balluff	See Data Sheet



**Note**

The read/write head BIS VU generally supports data carriers regardless of manufacturer, that meet the standards set by EPCglobal™ Class 1 Generation 2 or ISO IEC 18000-63.

**CRC check**

The CRC check is a procedure for determining a check value for data in order to be able to recognize transmission errors. If the CRC check is enabled, a status message will be sent when a CRC error is detected.



**Note**

The CRC check function is only supported by read/write heads in the BIS C, BIS VL, and BIS VM series.

**Checksum**

M and L system:

The checksum is written to the data carrier as 2 bytes of information. 2 bytes per block are lost. This leaves 14 bytes per block available. The usable number of bytes can be found in the following table.

C system:

The checksum is written to the data carrier as 2 bytes of information per page. 2 bytes per page are lost, i.e. the page size is 30 bytes or 62 bytes depending on the data carrier type.

**6** Startup

**CRC check**

The number of usable bytes thus decreases when using the checksum.

<b>Balluff data carrier type</b>	<b>Memory capacity</b>	<b>Usable bytes for CRC_16</b>
BIS M-1_ _-01	752 bytes	658 bytes
BIS M-1_ _-02	2000 bytes	1750 bytes
BIS M-1_ _-03	112 bytes	98 bytes
BIS M-1_ _-04	256 bytes	224 bytes
BIS M-1_ _-05	224 bytes	196 bytes
BIS M-1_ _-06	288 bytes	252 bytes
BIS M-1_ _-07	992 bytes	868 bytes
BIS M-1_ _-08	160 bytes	140 bytes
BIS M-1_ _-09	32 bytes	28 bytes
BIS M-1_ _-10	736 bytes	644 bytes
BIS M-1_ _-11	8192 bytes	7168 bytes
BIS M-1_ _-13	32786 bytes	28672 bytes
BIS M-1_ _-14	65536 bytes	57344 bytes
BIS M-1_ _-15	131072 bytes	114688 bytes
BIS M-1_ _-20	8192 bytes	7168 bytes
BIS M-1_ _-21	32 bytes	28 bytes
BIS M-1_ _-22	316 bytes	276 bytes
BIS M-1_ _-23	256 bytes	252 bytes
BIS L-1_ _-01	192 bytes	168 bytes
BIS L-2_ _-03	5 bytes (read-only)	—
BIS L-1_ _-05	192 bytes	168 bytes
BIS C-1_ _-04	511 bytes	450 bytes
BIS C-1_ _-05	1023 bytes	930 bytes
BIS C-1_ _-11	2047 bytes	1922 bytes
BIS C-1_ _-32	8192 bytes	7936 bytes

**Dynamic mode**

As soon as the *Dynamic Mode* function is enabled, the processor unit accepts the read/write job from the host control system and stores it, regardless of whether a data carrier is in the active zone of the R/W head or not. If a data carrier enters the active range of the R/W head, the stored job is run.



**Note**

To achieve the read times during dynamic operation that are specified on [page 73](#) the Tag Type parameter must be set to "BIS C 32 Byte" or "BIS C 64 Byte" on the respective head.

**6** Startup

**Type serial number**

If this function is enabled, the type of the read/write head as well as the data carrier type and the serial number (UID = Unique Identifier) for the data carrier are output with the Auto Read function instead of data. The data is output as soon as the data carrier is in the active zone of the read/write head. The CP bit is set in the input buffer.

The length of the outputted data is reduced to the configured buffer size as appropriate.

The length of the serial number can vary depending on the type of data carrier. To be able to determine the length, the data is preceded by a length field.

**i** **Note about BIS C**  
 BIS C data carriers do not have serial numbers.

**i** **Note about BIS VM and BIS VL**  
 BIS M and BIS L data carriers transfer a UID with a length of 4 bytes (e.g. Mifare and Hitag1) or a UID with a length of 8 bytes (ISO 15693) into the Serial Number field. Because of this, the data sheet for the data carrier used is to be followed.

**i** **Note about BIS VU**  
 BIS U data carriers transfer EPC or TID into the Serial Number field, depending on the most recently executed command. For BIS VU, 00<sub>hex</sub> is transferred by default into the data carrier type field.

Data Format	1 byte	1 byte	1 byte	Variable
Meaning	Length (number of bytes including length)	Read/write head type	Data Carrier Type	Serial Number

BIS VU-3_ _	BIS VM-3_ _-001-S4	BIS VL-3_ _-001-S4	BIS C-3_ _
04	03	02	01

**Slow tag detection**

For this option, the antenna on the read/write head is switched on for data carrier detection only every 200 ms. This function is configured in the respective read/write head module (only BIS VM).

**Low antenna power**

Transmitting power is reduced when using this parameter. The parameters for this function are configured in the respective read/write head module and is reserved for future read/write heads.

**i** **Note**  
 Information about configuring the transmission power for BIS VU read/write heads can be found in the manual for the BIS L read/write head. Manuals are available at [www.balluff.com](http://www.balluff.com).

**LEDs off**

This parameter switches off the LEDs on the respective read/write head. This function is configured in the respective read/write head module (only BIS VM and BIS VU).

## 6 Startup

<b>UID Compare Count</b>	This parameter indicates how often the 5-byte ID of a BIS L-1_ _-03 data carrier is imported and compared before the data carrier is shown as identified. The value default setting is 2. For highly dynamic applications, this value can be set to 1 (only BIS VL).
<b>Cycle time</b>	The cycle time controls the timing for triggering the IO-Link device. The factory default setting is 0 (Auto). It is recommended that this value be retained. The cycle time is stored in the IO-Link device (slave) and is detected automatically. Only times that are slower than the automatically selected times can be set manually.
<b>Offset data window and Length data window</b>	The offset (offset data window) can be used by the start byte with length (length data window) to define the end byte of the process data. This setting is only for the input data, has no influence on the actual process data length and is for visual purposes only.
<b>Validation type</b>	Whether a connected IO-Link device receives access to the IO-Link master can be controlled using validation.  Configuration options: <ul style="list-style-type: none"><li>- 0 No validation</li><li>- 1 Compatible Only allows communication to the IO-Link master for devices whose vendor ID (VID) and device ID (DID) correspond to the configured values.</li><li>- 2 Identical See "1 Compatible"; in addition, the serial number of the IO-Link device is checked</li></ul>
<b>Vendor ID, VID</b>	Vendor ID for the IO-Link device (refer to the manual for the device)
<b>Device ID, DID</b>	Device ID for the IO-Link device (refer to the manual for the device)
<b>Serial number (SerNum), optional</b>	Serial number for the IO-Link device (if available; refer to the IO-Link device's type plate)



**6 Startup**

**Parameter server, optional**

Automatic upload (IO-Link slave → IO-Link master) or download (IO-Link master → IO-Link slave) can be switched on using this parameter.  
 For automatic upload, the parameter configuration is read when an IO-Link device is plugged in.  
 For automatic download, the parameter configuration is transmitted to the device when an IO-Link device is plugged in.

Background:

The automatic upload makes it possible to read in the parameter configuration of a *correctly* configured device when plugging one in. If an IO-Link device has to be replaced, the previously read in parameter configuration from the *old* device is transferred to the *new* device when it is plugged in.

The "Upload" option can be disabled by having a valid parameter set read.

Configuration options:

- $8X_{hex}$ : Switch on
- $X1_{hex}$ : Switch on upload
- $X2_{hex}$ : Switch on download

**6.3 Integration into Project Planning Software**

**Installing the GSD file**

The connection of a BIS V-6108 to a Siemens S7 controller using "SIMATIC Manager" is shown as an example. The exact procedure depends on the project planning software used.

To perform project planning on the PC, the GSD file for the module must be installed:

- ▶ Open a new project.
- ▶ Open the hardware configurator.
- ▶ Select the "Tools | Install new GSD" menu command.  
 ⇒ An "Install new GSD file" dialog will appear.
- ▶ Select directory and GSD file.  
 ⇒ The [Install] button only becomes active if a GSD file is selected.
- ▶ Click on [Install].  
 ⇒ The GSD file is installed.  
 ⇒ A message appears once the process has finished.
- ▶ Confirm the message and close the window.
- ▶ Select the menu command "Tools | Update catalog".  
 ⇒ The devices are displayed in the product tree.

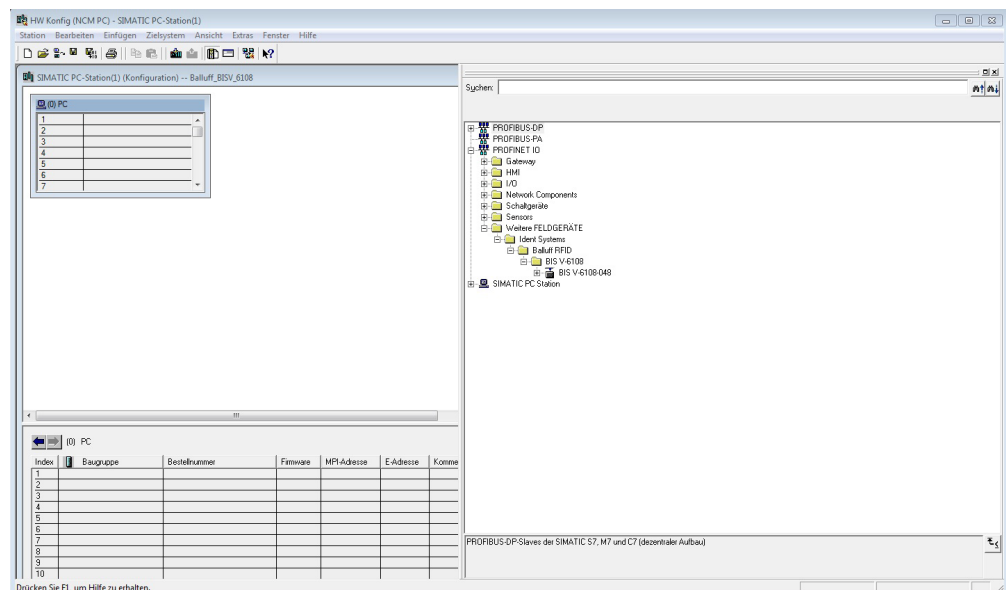


Figure 7: Parameter configuration with a GSDML file

6 Startup

**Adding a DP slave**

The devices are located in the hardware catalog under "Other field devices", "Ident systems", "Balluff". The module is added as PROFINET IO.

- ▶ Select the PROFINET rail.
- ▶ Double-clicking adds the device as a PROFINET IO.  
⇒ The slots are assigned the default settings.

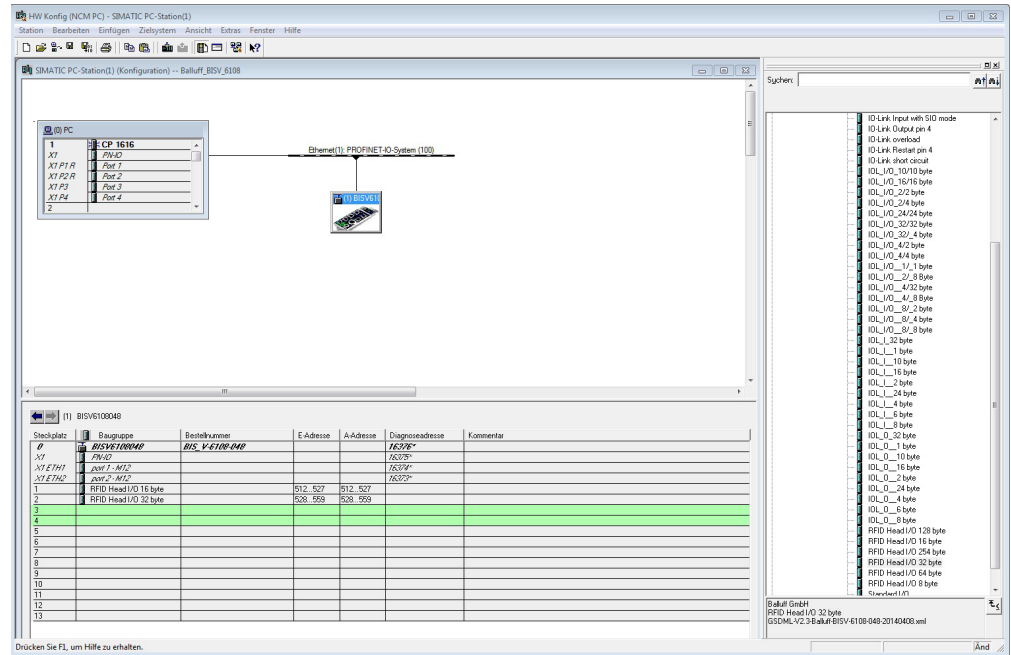


Figure 8: Adding the BIS V-6108 as a slave

**Determining the station name**

- ▶ Define the PROFINET station name of the device.

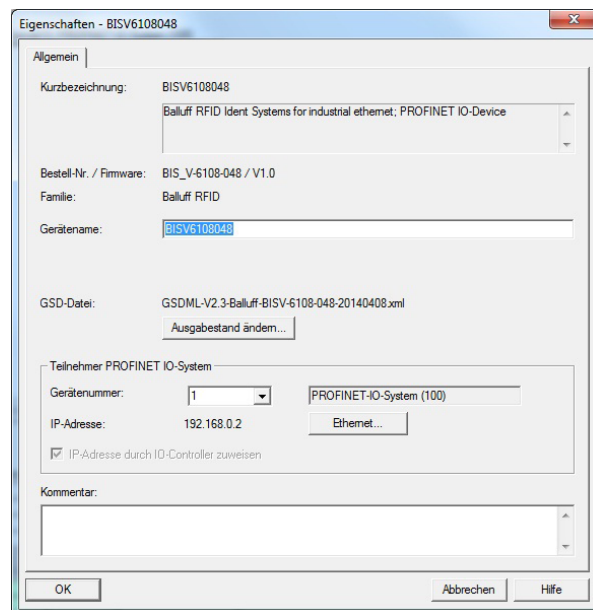


Figure 9: Determining the station name

**6 Startup**

**Changing the device's IP address**

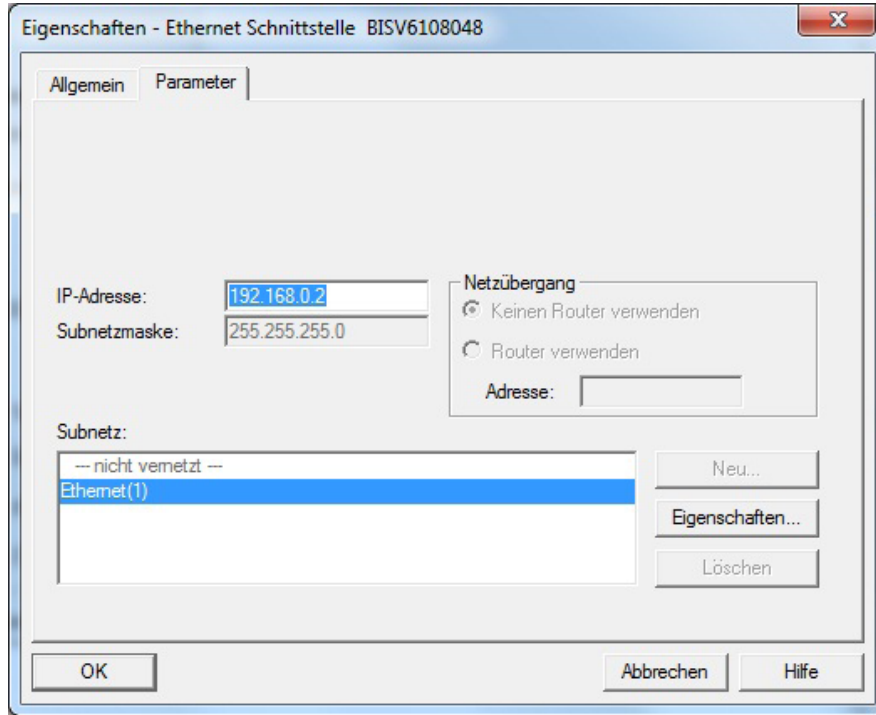


Figure 10: Changing the IP address

**Configuring read/write heads**

The quantity of process data (buffer size) for a read/write head can be selected by deleting and plugging in a corresponding "head" module (min. 8 bytes, max. 254 bytes). When a module is not plugged in, no process data is configured.

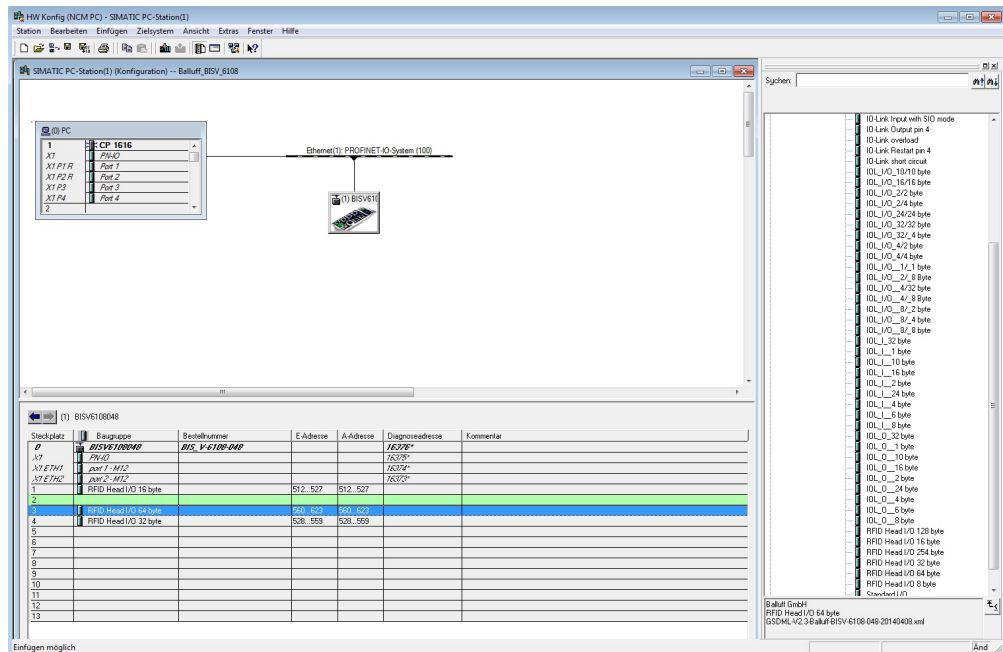


Figure 11: Configuring read/write heads

6 Startup

Configuring the IO-Link module

If a IO-Link module is to be installed, the standard I/O module has to be deleted first.

- ▶ Select the corresponding IO-Link module after the deletion.

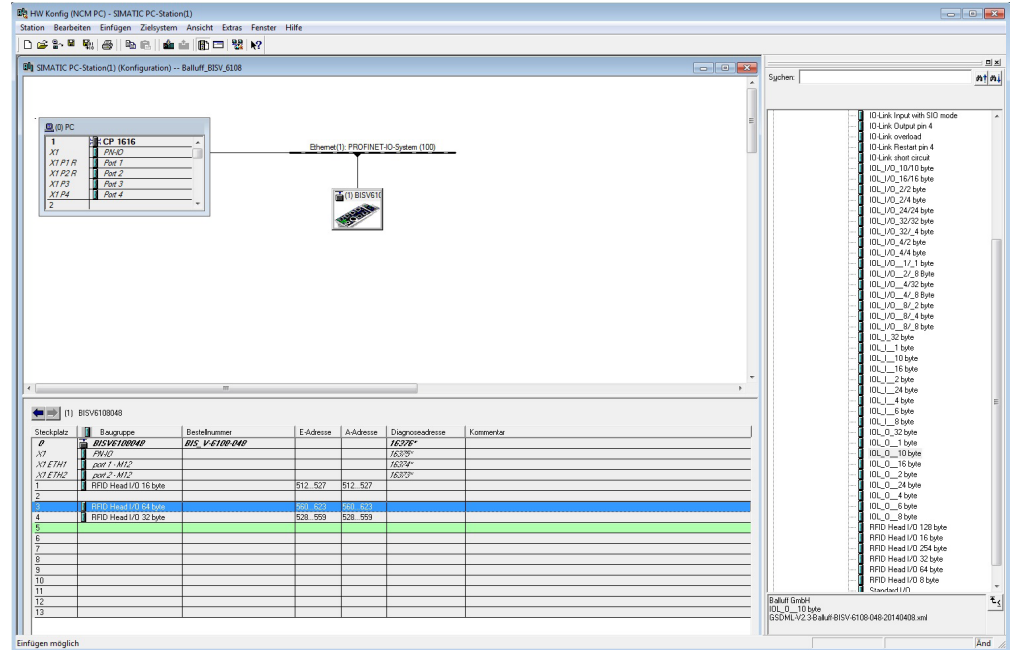


Figure 12: Selecting the IO-Link module

- ▶ Drag the selected module to slot 5 (slots 6...13 are reserved for optional additional modules for IO-Link).

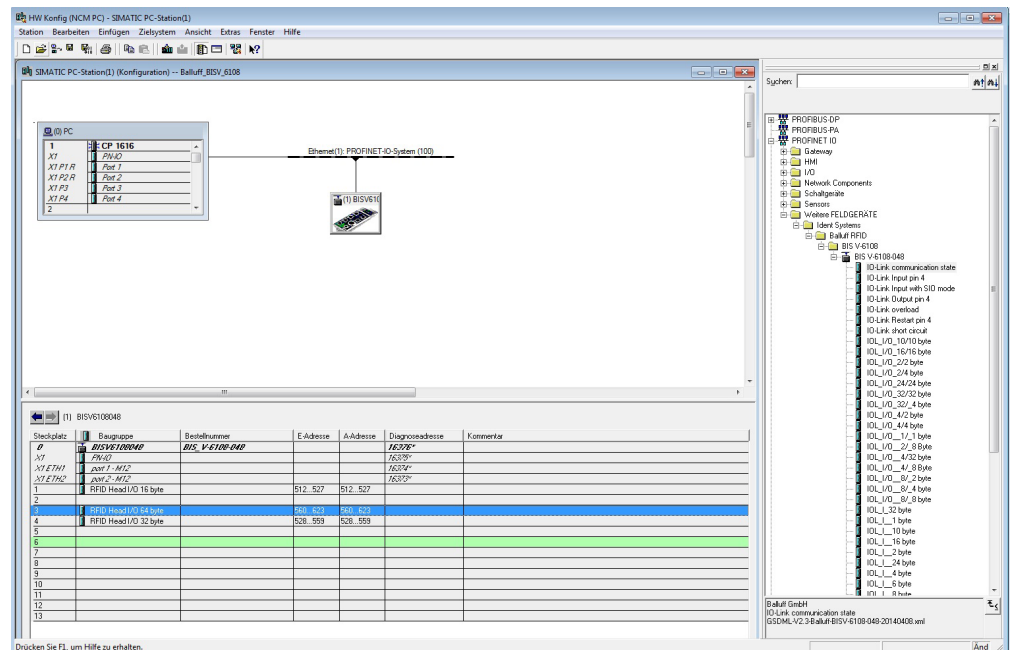


Figure 13: Plugging in the IO-Link module


**7** Device Functions

**7.1 Function Principle of the BIS V-6108**

Two buffers are needed to exchange data and commands between the processor unit and the host control system (input buffer and output buffer). The buffer contents are exchanged using cyclical polling. The buffer content depends on the cycle in which it is written (for example, control commands at the beginning of a job).  
 When writing to the buffer, the transmitted data from the previous cycle is overwritten. Unwritten bytes are not deleted and retain their data content.

**Example:**

Total buffer size 80 bytes (4 × 16 bytes: heads H1 to H4, 16 bytes: IO-Link)

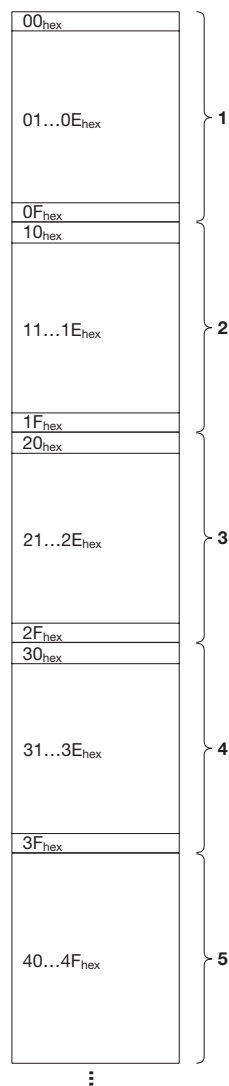

The total buffer size is derived from the sum of all buffers (ranges 1–5 + X) and is not allowed to exceed 244 bytes.

The process data buffer is divided into multiple ranges:

- Zone 1...4 = read/write heads 1...4 (H1...H4)
- Range 5 = IO-Link
- Potential additional ranges for IO-Link

The size of these ranges can be configured using the GSDML file.

Figure 14: Example for a total buffer size of 80 bytes (4 × 16 bytes: heads H1 to H4, 16 bytes: IO-Link)

- |  |  |
|--|--|
| <p><b>1</b> R/W head 1</p> <p><b>2</b> R/W head 2</p> <p><b>3</b> R/W head 3</p> | <p><b>4</b> R/W head 4</p> <p><b>5</b> IO-Link</p> <p>Subsequently, potential additional ranges for IO-Link.</p> |
|--|--|

**IO-Link**

IO-Link data is transmitted unchanged to the IO-Link Slaves via the IO-Link Master. IO-Link buffer: 0...32 bytes (max.)

**7** Device Functions

**7.2 Process Data Buffer**

**Output buffer**

The control commands for the identification system and the data to be written to the data carrier are transmitted via the output buffer.

Bit No.	7	6	5	4	3	2	1	0
Subaddress								
00 <sub>hex</sub> = Bit Header		TI	KA			GR		AV
01 <sub>hex</sub>	Command Identifier					or	Data	
02 <sub>hex</sub>	Start address (Low Byte) or program No.					or	Data	
03 <sub>hex</sub>	Start address (high byte)					or	Data	
04 <sub>hex</sub>	Number of bytes (low byte)					or	Data	
05 <sub>hex</sub>	Number of bytes (high byte)					or	Data	
06 <sub>hex</sub>	Data							
...	Data							
Last Byte = Bit Header		TI	KA			GR		AV

**Assignment and explanation**

Subaddress	Bit name	Meaning	Description of Function
00 <sub>hex</sub> /last byte	TI	Toggle Bit In	Controller is ready to receive additional data (read job).
	KA	Head shutoff	Shuts off the R/W head's antenna. Tag detection no longer takes place. CP and MT are 0.
	GR	Default state	Cancels the current job for this R/W head and puts the channel into a basic state. The R/W head can then be used again once GR = 0 and the controller has acknowledged this with BB = 1. CP and MT are 0.
	AV	Job	A job is present.

## 7 Device Functions

### Input buffer

The input buffer is used to send the data read from the identification system, the designations, and the status codes to the host control system.

Bit No. / Subaddress	7	6	5	4	3	2	1	0
00 <sub>hex</sub> = Bit Header	BB	HF	TO	MT	AF	AE	AA	CP
01 <sub>hex</sub>	Status code				or Data			
02 <sub>hex</sub>	Data							
...	Data							
Last Byte = Bit Header	BB	HF	TO	MT	AF	AE	AA	CP

### Assignment and explanation

Subaddress	Bit name	Meaning	Description of Function
00 <sub>hex</sub> /last byte	BB	Ready for Operation	After powering up or after a reset via the GR bit, the BB bit indicates that the corresponding channel is ready.
	HF	Head error	Cable break to the R/W head.
	TO	Toggle Bit Out	<b>Read:</b> Additional data is being provided by the identification system. <b>Write operation:</b> Identification system can accept additional data.
	MT	Multiple Tag	More than 1 data carrier is in the R/W head's field.
	AF	Job Error	A job was processed incorrectly or was canceled.
	AE	Job End	A job was completed without errors.
	AA	Job Start	A job was detected and started.
	CP	Code Present	A data carrier has been detected.

### Structure of the input buffer

The structure of the process data buffer is identical for all commands.

Subaddress	Meaning	Description of Function
00 <sub>hex</sub>	1st Bit Header	
01 <sub>hex</sub>	Status code	Provides information on the status of a query.
02 <sub>hex</sub>	Data	Transmission of data that was read from the data carrier.
...	Data	Transmission of data that was read from the data carrier.
Last byte	2nd Bit Header	If the 1st and 2nd bit headers match, the data is valid.



#### Note

Displaying the "multiple tag function" (MT) is not possible with BIS C read/write heads.

## 7 Device Functions

### Input buffer

### Status codes

Status code	Description of Function
00 <sub>hex</sub>	Everything OK.
01 <sub>hex</sub>	Job cannot be run because there is no data carrier in range of the read/write head.
02 <sub>hex</sub>	Cannot read the data carrier.
03 <sub>hex</sub>	Data carrier was removed from the R/W head's range during reading.
04 <sub>hex</sub>	Cannot write to the data carrier.
05 <sub>hex</sub>	Data carrier was removed from the R/W head's range during writing.
07 <sub>hex</sub>	No or invalid command identifier for set AV bit or the number of bytes is 00 <sub>hex</sub> .
09 <sub>hex</sub>	R/W head cable break or no R/W head connected.
0D <sub>hex</sub>	Communication to the R/W head disrupted.
0E <sub>hex</sub>	CRC for the read data and CRC for the data carrier do not agree.
0F <sub>hex</sub>	1st and 2nd bit header are not the same. The 2nd bit header must be used.
20 <sub>hex</sub>	Address assignment of the read/write job is outside the memory range of the data carrier.
21 <sub>hex</sub>	This function is not possible for this data carrier.
30 <sub>hex</sub>	License key incorrect.
31 <sub>hex</sub>	Invalid parameter set.
32 <sub>hex</sub>	Password required.
33 <sub>hex</sub>	Password invalid.
34 <sub>hex</sub>	Memory area is locked.
35 <sub>hex</sub>	Value range of the parameter incorrect.

### Description of the Code Present (CP) and Multiple Tag (MT) bits

CP	MT	Meaning
0	0	No tag in the field
1	0	Exactly one tag in the field. Automatic reading is OK (if configured).
0	1	More than one data carrier is in the field. They cannot be processed.
1	1	Does not occur.

### Structure of the commands for read/write heads

#### Command Identifier 00<sub>hex</sub> : No Command Present

Subaddress	Meaning	Description of Function
00 <sub>hex</sub>	1st Bit Header	
01 <sub>hex</sub>	Command Identifier	00 <sub>hex</sub> : No command present.
Last byte	2nd Bit Header	



**7** Device Functions

**Structure of the commands for read/write heads**

**Command designator 01<sub>hex</sub>: Read from data carrier**

Reads USER data from the specified start address. The data length is equal to the number of bytes.

When using a data carrier with expanded memory, the *Read Data Carrier* command can also be executed as a command with 24-bit addresses.  
 Refer to: Command Identifier 81<sub>hex</sub>, Read Data Carrier with 24-bit Addresses.



**Note**

UHF data carriers, depending on the type, provide different memory banks. The read/write head BIS VU can be configured with respect to the memory bank in order to handle these memory banks.  
 The memory bank is preset at the factory to USER data. Please refer to the manual for the UHF read/write head as well as the data sheet for the data carrier.

Subaddress	Meaning	Description of Function
00 <sub>hex</sub>	1st Bit Header	
01 <sub>hex</sub>	Command Identifier	01 <sub>hex</sub> : Read from data carrier.
02 <sub>hex</sub>	Start address (low byte)	Start address for reading.
03 <sub>hex</sub>	Start address (high byte)	Start address for reading.
04 <sub>hex</sub>	Number of bytes (low byte)	Number of bytes to be read starting from the start address.
05 <sub>hex</sub>	Number of bytes (high byte)	Number of bytes to be read starting from the start address.
...	None	No meaning
Last byte	2nd Bit Header	If the 1st and 2nd bit headers match, the data is valid.

If execution is successful, the response is passed to the input buffer in the following format:

Subaddress	Meaning	Description of Function
00 <sub>hex</sub>	1st Bit Header	
01 <sub>hex</sub>	Data	Transmission of the data that is to be written to the data carrier.
...	Data	Transmission of the data that is to be written to the data carrier.
Last byte	2nd Bit Header	If the 1st and 2nd bit headers match, the data is valid.

Depending on the number of bytes to read and the configured buffer size, multiple bus cycles may be necessary to transfer the data.

## 7 Device Functions

### Structure of the commands for read/write heads

#### Command Identifier 81<sub>hex</sub> : Read Data Carrier with 24-bit Addresses

When assigning addresses to data carriers with expanded memory, the start address and number of bytes can be specified as 24-bit values. Information about executing the command as well as about return values are drawn from the 01<sub>hex</sub> command (See “[Command Identifier 00<sub>hex</sub> : No Command Present](#)”).

Subaddress	Meaning	Description of Function
00 <sub>hex</sub>	1st Bit Header	
01 <sub>hex</sub>	Command Identifier	01 <sub>hex</sub> : Read from data carrier.
02 <sub>hex</sub>	Start address (low byte)	Start address for reading.
03 <sub>hex</sub>	Start address (middle byte)	Start address for reading.
04 <sub>hex</sub>	Start address (high byte)	Start address for reading.
05 <sub>hex</sub>	Number of bytes (low byte)	Number of bytes to be read starting from the start address.
06 <sub>hex</sub>	Number of bytes (middle byte)	Number of bytes to be read starting from the start address.
07 <sub>hex</sub>	Number of bytes (high byte)	Number of bytes to be read starting from the start address.
...	None	No meaning
Last byte	2nd Bit Header	Valid data is present if the 1st and 2nd bit strings match.

## 7 Device Functions

### Structure of the commands for read/write heads

#### Command Identifier 02<sub>hex</sub> : Write to Data Carrier

Writes USER data at the specified start address. The data length is equal to the number of bytes. When using a data carrier with expanded memory, the *Write to Data Carrier* command can also be executed as a command with 24-bit addresses.

Refer to: Command Identifier 81<sub>hex</sub>, Read Data Carrier with 24-bit Addresses.



#### Note

A password is required to write to read-only data carriers.

Write commands that are attempted with an invalid password will be acknowledged with the status message *Password Required* or *Password Invalid* (See “Status codes” on page 36).

Details about access passwords can be found in the manual of the UHF read/write head used.

Subaddress	Meaning	Description of Function
00 <sub>hex</sub>	1st Bit Header	
01 <sub>hex</sub>	Command Identifier	02 <sub>hex</sub> : Write to data carrier.
02 <sub>hex</sub>	Start address (low byte)	Start address to be written from.
03 <sub>hex</sub>	Start address (high byte)	Start address to be written from.
04 <sub>hex</sub>	Number of bytes (low byte)	Number of bytes to be written starting from the start address.
05 <sub>hex</sub>	Number of bytes (high byte)	Number of bytes to be written starting from the start address.
...	None	No meaning
Last byte	2nd Bit Header	If the 1st and 2nd bit headers match, the data is valid.

Data is accepted from the processor unit only after the command has been accepted by the processor unit and acknowledged.

Subaddress	Meaning	Description of Function
00 <sub>hex</sub>	1st Bit Header	
01 <sub>hex</sub>	Data	Transmission of the data that is to be written to the data carrier.
...	Data	Transmission of the data that is to be written to the data carrier.
...	None	No meaning
Last byte	2nd Bit Header	If the 1st and 2nd bit headers match, the data is valid

#### Input Buffer: Status Message

Subaddress	Meaning	Description of Function
00 <sub>hex</sub>	1st Bit Header	
01 <sub>hex</sub>	Data	Provides information on the status of a query.
...	Data	No meaning
Last byte	2nd Bit Header	If the 1st and 2nd bit headers match, the data is valid.

## 7 Device Functions

### Structure of the commands for read/write heads

#### Command designator 82<sub>hex</sub>: Write to data carrier with 24-bit addresses

When assigning addresses to data carriers with expanded memory, the start address and number of bytes can be specified as 24-bit values. Information about executing the command as well as about return values are drawn from the 02<sub>hex</sub> command (See “[Command Identifier 02<sub>hex</sub>: Write to Data Carrier](#)”).

Subaddress	Meaning	Description of Function
00 <sub>hex</sub>	1st Bit Header	
01 <sub>hex</sub>	Command Identifier	02 <sub>hex</sub> : Write to data carriers.
02 <sub>hex</sub>	Start address (low byte)	Start address to be written from.
03 <sub>hex</sub>	Start address (middle byte)	Start address to be written from.
04 <sub>hex</sub>	Start address (high byte)	Start address to be written from.
05 <sub>hex</sub>	Number of bytes (low byte)	Number of bytes to be written starting from the start address.
06 <sub>hex</sub>	Number of bytes (middle byte)	Number of bytes to be written starting from the start address.
07 <sub>hex</sub>	Number of bytes (high byte)	Number of bytes to be written starting from the start address.
...	None	No meaning
Last byte	2nd Bit Header	Valid data is present if the 1st and 2nd bit strings match.

#### Command designator 03<sub>hex</sub>: Display output

Output of a predetermined character string on the display.

Subaddress	Meaning	Description of Function
00 <sub>hex</sub>	1st Bit Header	
01 <sub>hex</sub>	Command Identifier	03 <sub>hex</sub> : Display output.
02 <sub>hex</sub>	Data	Characters for display output.
...	Data	Characters for display output.
Last byte	2nd Bit Header	If the 1st and 2nd bit headers match, the data is valid.

#### Input Buffer: Status Message

Subaddress	Meaning	Description of Function
00 <sub>hex</sub>	1st Bit Header	
01 <sub>hex</sub>	Status code	Provides information on the status of a query.
...	None	No meaning
Last byte	2nd Bit Header	If the 1st and 2nd bit headers match, the data is valid.

**7** Device Functions

**Structure of the commands for read/write heads**

**Command designator 07<sub>hex</sub>: Store the start address for the "Auto Read" function**

Configuring the start address after the data is read with the Auto Read function. For more details, see the "Description of individual parameters" chapter on page 23.

Subaddress	Meaning	Description of Function
00 <sub>hex</sub>	1st Bit Header	
01 <sub>hex</sub>	Command Identifier	07 <sub>hex</sub> : Save the start address for the Auto Read function.
02 <sub>hex</sub>	Start address (low byte)	Address for the "Auto Read" function starting from which the data carrier is read. The value is stored in the EEPROM.
03 <sub>hex</sub>	Start address (high byte)	Address for the "Auto Read" function starting from which the data carrier is read. The value is stored in the EEPROM.
...	None	No meaning
Last byte	2nd Bit Header	If the 1st and 2nd bit headers match, the data is valid.

**Input Buffer: Status Message**

Subaddress	Meaning	Description of Function
00 <sub>hex</sub>	1st Bit Header	
01 <sub>hex</sub>	Status code	Provides information on the status of a query.
...	None	No meaning
Last byte	2nd Bit Header	If the 1st and 2nd bit headers match, the data is valid.

**Structure of the commands for read/write heads**

**Command Identifier 87<sub>hex</sub>: Save the Start Address for the Auto Read Function with 24-bit addresses**

When assigning addresses to data carriers with expanded memory, the start address and number of bytes can be specified as 24-bit values. Information about executing the command as well as about return values are drawn from the 07<sub>hex</sub> command (See "Command designator 07<sub>hex</sub>: Store the start address for the „Auto Read“ function").

Subaddress	Meaning	Description of Function
00 <sub>hex</sub>	1st Bit Header	
01 <sub>hex</sub>	Command Identifier	07 <sub>hex</sub> : Save the start address for the Auto Read function.
02 <sub>hex</sub>	Start address (low byte)	Address for the "Auto Read" function starting from which the data carrier is read. The value is stored in the EEPROM.
03 <sub>hex</sub>	Start address (middle byte)	Address for the "Auto Read" function starting from which the data carrier is read. The value is stored in the EEPROM (optional, 24-bit command).
04 <sub>hex</sub>	Start address (high byte)	Address for the "Auto Read" function starting from which the data carrier is read. The value is stored in the EEPROM.
...	None	No meaning
Last byte	2nd Bit Header	Valid data is present if the 1st and 2nd bit strings match.

## 7 Device Functions

### Structure of the commands for read/write heads

#### Command designator 09<sub>hex</sub>: Type and serial number

If a data carrier is recognized in the active read/write zone of the read/write head, this command will return the read-write head type as well as the data carrier type and serial number of the detected data carrier.



#### Note

For details about read/write head types and data carrier types, see the [“Description of individual parameters” chapter on page 23](#).

Subaddress	Meaning	Description of Function
00 <sub>hex</sub>	1st Bit Header	
01 <sub>hex</sub>	Command Identifier	09 <sub>hex</sub> : Read out type and serial number.
...	None	No meaning
Last byte	2nd Bit Header	If the 1st and 2nd bit headers match, the data is valid.

If execution is successful, the response is passed to the input buffer in the following format:

Subaddress	Meaning	Description of Function
00 <sub>hex</sub>	1st Bit Header	
01 <sub>hex</sub>	Length	Length (number of bytes including length)
02 <sub>hex</sub>	Read/write head type	C = 01/VL = 02/VM = 03/VU = 04
03 <sub>hex</sub>	Data Carrier Type	Data Carrier Type
04 <sub>hex</sub>	Serial Number / UID	UID data that was transmitted from the data carrier.
05 <sub>hex</sub>	Serial Number / UID	UID data that was transmitted from the data carrier.
...	None	No meaning
Last byte	2nd Bit Header	If the 1st and 2nd bit headers match, the data is valid.

**7** Device Functions

**Structure of the commands for read/write heads**

**Command designator 11<sub>hex</sub>: Copy data between data carriers**

Copy data from one data carrier to another. The specified number of bytes will be copied from the source start address in the source data carrier to the target start address in the target data carrier. Care must be taken to ensure that the memory areas of the source and target data carriers are compatible.

Subaddress	Meaning	Description of Function
00 <sub>hex</sub>	1st Bit Header	
01 <sub>hex</sub>	Command Identifier	11 <sub>hex</sub> : Copy data carrier.
02 <sub>hex</sub>	Source start address (low byte)	Copy the start address of the source data carrier for the function from which copying is to start.
03 <sub>hex</sub>	Source start address (high byte)	Copy the start address of the source data carrier for the function from which copying is to start.
04 <sub>hex</sub>	Target start address (low byte)	Copy the start address of the target data carrier for the function from which copying is to start.
05 <sub>hex</sub>	Target start address (high byte)	Copy the start address of the target data carrier for the function from which copying is to start.
06 <sub>hex</sub>	Number of bytes (low byte)	Number of bytes to be copied starting from the source start address.
07 <sub>hex</sub>	Number of bytes (high byte)	Number of bytes to be copied starting from the source start address.
08 <sub>hex</sub>	Target R/W head number	Number of the read/write head that the target data carrier is in front of.
...	None	No meaning
Last byte	2nd Bit Header	If the 1st and 2nd bit headers match, the data is valid.

**Input Buffer: Status Message**

Subaddress	Meaning	Description of Function
00 <sub>hex</sub>	1st Bit Header	
01 <sub>hex</sub>	Status code	Provides information on the status of a query.
...	None	No meaning
Last byte	2nd Bit Header	If the 1st and 2nd bit headers match, the data is valid.

**7** Device Functions

**Structure of the commands for read/write heads**

**Command Identifier 91<sub>hex</sub> : Copy Data Between Data Carriers with 24-bit Addresses**

When assigning addresses to data carriers with expanded memory, the start address and number of bytes can be specified as 24-bit values. Information about executing the command as well as about return values are drawn from the 11<sub>hex</sub> command (See “[Command designator 11<sub>hex</sub>: Copy data between data carriers](#)”).

Subaddress	Meaning	Description of Function
00 <sub>hex</sub>	1st Bit Header	
01 <sub>hex</sub>	Command Identifier	11 <sub>hex</sub> : Copy data.
02 <sub>hex</sub>	Source start address (low byte)	Copy the start address of the source data carrier for the function from which copying is to start.
03 <sub>hex</sub>	Source Start Address (Middle Byte)	Copy the start address of the source data carrier for the function from which copying is to start.
04 <sub>hex</sub>	Source start address (high byte)	Copy the start address of the source data carrier for the function from which copying is to start.
05 <sub>hex</sub>	Target start address (low byte)	Copy the start address of the target data carrier for the function from which copying is to start.
06 <sub>hex</sub>	Target Start Address (Middle Byte)	Copy the start address of the target data carrier for the function from which copying is to start.
07 <sub>hex</sub>	Target start address (high byte)	Copy the start address of the target data carrier for the function from which copying is to start.
08 <sub>hex</sub>	Number of bytes (low byte)	Number of bytes to be copied starting from the source start address.
09 <sub>hex</sub>	Number of bytes (middle byte)	Number of bytes to be copied starting from the source start address.
0A <sub>hex</sub>	Number of bytes (high byte)	Number of bytes to be copied starting from the source start address.
0B <sub>hex</sub>	Target R/W head number	Number of the read/write head that the target data carrier is in front of.
...	None	No meaning
Last byte	2nd Bit Header	If the 1st and 2nd bit headers match, the data is valid.



**7** Device Functions

**Structure of the commands for read/write heads**

**Command designator 12<sub>hex</sub>: Initialize CRC\_16 data check**

The memory area of the data carrier used is prepared for use with a CRC data check. It is initialized by writing USER data with a checksum.

If the CRC data check is enabled in the processor unit, then read and write commands on a memory area that is not initialized leads to a CRC error.



**Note**

CRC data checks reduce the usable storage area in the data carrier, but it increases the integrity of the data (See the “Description of individual parameters” chapter on page 23).

Subaddress	Meaning	Description of Function
00 <sub>hex</sub>	1st Bit Header	
01 <sub>hex</sub>	Command Identifier	12 <sub>hex</sub> : Initialize data carrier.
02 <sub>hex</sub>	Start address (low byte)	Start address from which the CRC_16 data check is to be carried out.
03 <sub>hex</sub>	Start address (high byte)	Start address from which the CRC_16 data check is to be carried out.
04 <sub>hex</sub>	Number of bytes (low byte)	Start address from which the CRC_16 data check is to be carried out.
05 <sub>hex</sub>	Number of bytes (high byte)	Start address from which the CRC_16 data check is to be carried out.
...	None	No meaning
Last byte	2nd Bit Header	If the 1st and 2nd bit headers match, the data is valid.

Data is accepted from the processor unit only after the command has been accepted by the processor unit and acknowledged.

Subaddress	Meaning	Description of Function
00 <sub>hex</sub>	1st Bit Header	
01 <sub>hex</sub>	Data	Transmission of the data that is to be written to the data carrier.
...	Data	Transmission of the data that is to be written to the data carrier.
...	None	No meaning
Last byte	2nd Bit Header	If the 1st and 2nd bit headers match, the data is valid.

**Input Buffer: Status Message**

Subaddress	Meaning	Description of Function
00 <sub>hex</sub>	1st Bit Header	
01 <sub>hex</sub>	Status code	Provides information on the status of a query.
...	None	No meaning
Last byte	2nd Bit Header	If the 1st and 2nd bit headers match, the data is valid.

## 7 Device Functions

### Structure of the commands for read/write heads

#### Command Identifier 92<sub>hex</sub> : Initialize CRC\_16 Data Check with 24-bit Addresses

When assigning addresses to data carriers with expanded memory, the start address and number of bytes can be specified as 24-bit values. Information about executing the command as well as about return values are drawn from the 12<sub>hex</sub> command (See “[Command designator 12<sub>hex</sub>: Initialize CRC\\_16 data check](#)”).

Subaddress	Meaning	Description of Function
00 <sub>hex</sub>	1st Bit Header	
01 <sub>hex</sub>	Command Identifier	12 <sub>hex</sub> : Initialize data carrier.
02 <sub>hex</sub>	Start address (low byte)	Start address from which the CRC_16 data check is to be carried out.
03 <sub>hex</sub>	Start address (middle byte)	Start address from which the CRC_16 data check is to be carried out.
04 <sub>hex</sub>	Start address (high byte)	Start address from which the CRC_16 data check is to be carried out.
05 <sub>hex</sub>	Number of bytes (low byte)	Start address from which the CRC_16 data check is to be carried out.
06 <sub>hex</sub>	Number of bytes (middle byte)	Start address from which the CRC_16 data check is to be carried out.
07 <sub>hex</sub>	Number of bytes (high byte)	Start address from which the CRC_16 data check is to be carried out.
...	None	No meaning
Last byte	2nd Bit Header	If the 1st and 2nd bit headers match, the data is valid.

**7** Device Functions

**Structure of the commands for read/write heads**

**Command designator 32<sub>hex</sub>: Write constant value to data carrier**

Writes a constant value to the memory area, which is indicated with a start address and number of bytes.

Subaddress	Meaning	Description of Function
00 <sub>hex</sub>	1st Bit Header	
01 <sub>hex</sub>	Command Identifier	32 <sub>hex</sub> : Write a constant value to the data carrier.
02 <sub>hex</sub>	Start address (low byte)	Start address to be written from.
03 <sub>hex</sub>	Start address (high byte)	Start address to be written from.
04 <sub>hex</sub>	Number of bytes (low byte)	Number of bytes to be written starting from the start address.
05 <sub>hex</sub>	Number of bytes (high byte)	Number of bytes to be written starting from the start address.
...	None	No meaning
Last byte	2nd Bit Header	If the 1st and 2nd bit headers match, the data is valid.

Data is accepted from the processor unit only after the command has been accepted by the processor unit and acknowledged.

Subaddress	Meaning	Description of Function
00 <sub>hex</sub>	1st Bit Header	
01 <sub>hex</sub>	Data	Value that is to be written to the data carrier.
...	None	No meaning
Last byte	2nd Bit Header	If the 1st and 2nd bit headers match, the data is valid.

**Input Buffer: Status Message**

Subaddress	Meaning	Description of Function
00 <sub>hex</sub>	1st Bit Header	
01 <sub>hex</sub>	Data	Value that is to be written to the data carrier.
...	None	No meaning
Last byte	2nd Bit Header	If the 1st and 2nd bit headers match, the data is valid.

## 7 Device Functions

### Structure of the commands for read/write heads

#### Command Identifier B2<sub>hex</sub>: Write Constant Value to Data Carrier with 24-bit Addresses

When assigning addresses to data carriers with expanded memory, the start address and number of bytes can be specified as 24-bit values. Information about executing the command as well as about return values are drawn from the 12<sub>hex</sub> command (See “[Command designator 12<sub>hex</sub>: Initialize CRC\\_16 data check](#)”).

Subaddress	Meaning	Description of Function
00 <sub>hex</sub>	1st Bit Header	
01 <sub>hex</sub>	Command Identifier	32 <sub>hex</sub> : Write a constant value to the data carrier.
02 <sub>hex</sub>	Start address (low byte)	Start address to be written from.
03 <sub>hex</sub>	Start address (middle byte)	Start address to be written from.
04 <sub>hex</sub>	Start address (high byte)	Start address to be written from.
05 <sub>hex</sub>	Number of bytes (low byte)	Number of bytes to be written starting from the start address.
06 <sub>hex</sub>	Number of bytes (middle byte)	Number of bytes to be written starting from the start address.
07 <sub>hex</sub>	Number of bytes (high byte)	Number of bytes to be written starting from the start address.
...	None	No meaning
Last byte	2nd Bit Header	Valid data is present if the 1st and 2nd bit strings match.

**7** Device Functions

**Specific commands for BIS VU read/write heads**



**Note**

Details and more information about the available parameters as well as BIS VU-specific commands can be found in the manual of the BIS VU read/write head used (Available at [www.balluff.com](http://www.balluff.com)).

**Command Identifier 40<sub>hex</sub>: Select (Select Data Carrier in Multi-tag Mode)**

In the Multi-tag Mode, the Select command selects a single data carrier from within a data carrier population. A data carrier that is located in the active read/write zone of the antenna is accessed and selected directly based on its EPC or its TID and is then available for further processing.

Subaddress	Meaning	Description of Function
00 <sub>hex</sub>	1st Bit Header	
01 <sub>hex</sub>	Command Identifier	40 <sub>hex</sub> : Select Tag (Selecting the data carrier).
02 <sub>hex</sub>	Type EPC/TID	EPC = 0 TID = 1
03 <sub>hex</sub>	No. of bytes	Number of bytes for the data carrier identifier (EPC or TID) that is transmitted in subsequent cycles.
04 <sub>hex</sub>	Reserved	Set to 0.
05 <sub>hex</sub>	Reserved	Set to 0.
06 <sub>hex</sub>	Reserved	Set to 0.
...	None	No meaning
Last byte	2nd Bit Header	Valid data is present if the 1st and 2nd bit strings match.

Data is accepted from the processor unit only after the command has been accepted by the processor unit and acknowledged.

Subaddress	Meaning	Description of Function
00 <sub>hex</sub>	1st Bit Header	
01 <sub>hex</sub>	Data	1st byte of the data carrier identifier (EPC or TID)
...	Data	Other bytes of the data carrier identifier (EPC or TID)
...	None	No meaning
Last byte	2nd Bit Header	Valid data is present if the 1st and 2nd bit strings match.

**Input Buffer: Status Message**

Subaddress	Meaning	Description of Function
00 <sub>hex</sub>	1st Bit Header	
01 <sub>hex</sub>	Status code	Provides information on the status of a query.
...	None	No meaning
Last byte	2nd Bit Header	If the 1st and 2nd bit headers match, the data is valid.

## 7 Device Functions

### Specific commands for BIS VU read/write heads

#### Command Identifier 41<sub>hex</sub>: Unselect (Undo a Data Carrier Selection)

The Unselect command undoes one data carrier selection that was carried out with the Select command. If a selection is not active, the status will remain unchanged.

Subaddress	Meaning	Description of Function
00 <sub>hex</sub>	1st Bit Header	
01 <sub>hex</sub>	Command Identifier	41 <sub>hex</sub> : Unselect (Undo the data carrier selection).
...	None	No meaning
Last byte	2nd Bit Header	If the 1st and 2nd bit headers match, the data is valid.

#### Input Buffer: Status Message

Subaddress	Meaning	Description of Function
00 <sub>hex</sub>	1st Bit Header	
01 <sub>hex</sub>	Status code	Provides information on the status of a query.
...	None	No meaning
Last byte	2nd Bit Header	If the 1st and 2nd bit headers match, the data is valid.

**7** Device Functions

**Specific commands for BIS VU read/write heads**

**Command Identifier 42<sub>hex</sub>: Read from EPC**

Reads the EPC memory area of a data carrier that was previously selected with the Select command.

In Single-Tag mode, that is, if only one data carrier is located in front of the active read/write zone antenna, then the Select command can be disregarded. The *Read from EPC* command will be automatically executed on the data carrier that is located in front of the antenna.



**Note**

If the order is executed without the preceding Select when more than one data carrier is located in front of the antenna, the command will be acknowledged with the Multiple-Tags status code.

Subaddress	Meaning	Description of Function
00 <sub>hex</sub>	1st Bit Header	
01 <sub>hex</sub>	Command Identifier	42 <sub>hex</sub> : Read from EPC.
...	None	No meaning
Last byte	2nd Bit Header	Valid data is present if the 1st and 2nd bit strings match.

If execution is successful, the response is passed to the input buffer in the following format:

Subaddress	Meaning	Description of Function
00 <sub>hex</sub>	1st Bit Header	
01 <sub>hex</sub>	No. of bytes	Number of bytes in the read EPC.
02 <sub>hex</sub>	EPC Data	Transmission of EPC data that was read from the data carrier.
...	EPC Data	Transmission of EPC data that was read from the data carrier.
...	None	No meaning
Last byte	2nd Bit Header	Valid data is present if the 1st and 2nd bit strings match.

or

**Input Buffer: Status Message**

Subaddress	Meaning	Description of Function
00 <sub>hex</sub>	1st Bit Header	
01 <sub>hex</sub>	Status code	Provides information about the status of a query:
...	None	No meaning
Last byte	2nd Bit Header	If the 1st and 2nd bit headers match, the data is valid.

## 7 Device Functions

### Specific commands for BIS VU read/write heads

#### Command Identifier 43<sub>hex</sub>: Write to EPC

Writes to the EPC memory area of a data carrier that was previously selected with the Select command.

In Single-Tag mode, that is, if only one data carrier is located in front of the active read/write zone antenna, then the Select command can be disregarded. The *Write to EPC* command will be automatically executed on the data carrier that is located in front of the antenna.



#### Note

If the order is executed without the preceding Select and more than one data carrier is located in front of the antenna, the command will then be acknowledged with the Multiple-Tags status code. The EPC can have a length of 2...62 bytes; the number of bytes must be even.

Subaddress	Meaning	Description of Function
00 <sub>hex</sub>	1st Bit Header	
01 <sub>hex</sub>	Command Identifier	43 <sub>hex</sub> : Write to EPC.
02 <sub>hex</sub>	No. of bytes	Number of bytes for the EPC to be written.
...	None	No meaning
Last byte	2nd Bit Header	If the 1st and 2nd bit headers match, the data is valid.

Data is accepted from the processor unit only after the command has been accepted by the processor unit and acknowledged.

Subaddress	Meaning	Description of Function
00 <sub>hex</sub>	1st Bit Header	
01 <sub>hex</sub>	EPC Data	Transmission of the EPC data that is to be written to the data carrier.
02 <sub>hex</sub>	EPC Data	Transmission of the EPC data that is to be written to the data carrier.
...	None	No meaning
Last byte	2nd Bit Header	If the 1st and 2nd bit headers match, the data is valid.

#### Input Buffer: Status Message

Subaddress	Meaning	Description of Function
00 <sub>hex</sub>	1st Bit Header	
01 <sub>hex</sub>	Status code	Provides information on the status of a query.
...	None	No meaning
Last byte	2nd Bit Header	If the 1st and 2nd bit headers match, the data is valid.



**7** Device Functions

**Specific commands for BIS VU read/write heads**

**Command Identifier 44<sub>hex</sub>: Read from TID**

Reads the TID memory area of a data carrier that was previously selected with the Select command.

In Single-Tag mode, that is, if only one data carrier is located in front of the active read/write zone antenna, then the Select command can be disregarded. The *Read from EPC* command will be automatically executed on the data carrier that is located in front of the antenna.



**Note**

If the order is executed without the preceding Select and more than one data carrier is located in front of the antenna, the command will then be acknowledged with the Multiple-Tags status code.  
 The length of the TID data field is defined by a parameter setting.

Subaddress	Meaning	Description of Function
00 <sub>hex</sub>	1st Bit Header	
01 <sub>hex</sub>	Command Identifier	44 <sub>hex</sub> : Read from TID.
...	None	No meaning
Last byte	2nd Bit Header	If the 1st and 2nd bit headers match, the data is valid.

If execution is successful, the response is passed to the input buffer in the following format:

Subaddress	Meaning	Description of Function
00 <sub>hex</sub>	1st Bit Header	
01 <sub>hex</sub>	TID Data	Transmission of TID data that was read from the data carrier.
...	TID Data	Transmission of TID data that was read from the data carrier.
...	None	No meaning
Last byte	2nd Bit Header	Valid data is present if the 1st and 2nd bit strings match.

or

**Input Buffer: Status Message**

Subaddress	Meaning	Description of Function
00 <sub>hex</sub>	1st Bit Header	
01 <sub>hex</sub>	Status code	Provides information on the status of a query.
...	None	No meaning
Last byte	2nd Bit Header	If the 1st and 2nd bit headers match, the data is valid.

## 7 Device Functions

### Specific commands for BIS VU read/write heads

#### Command Identifier 45<sub>hex</sub>: Configure the Transmission Power

The transmission power for the antenna (ERP or EIRP), which is specified as a value in quarter dBm increments, affects the maximum range of the read/write range of the antenna.

The maximum transmission power depends on the read/write head used.

#### Example:

Configuring a transmission power of 21 dBm (125 mW):  $21 * 4 = 84 \Rightarrow (54_{hex})$



#### Note

The entered value is not saved permanently and will be restored to the default value when the Reader is rebooted.

Subaddress	Meaning	Description of Function
00 <sub>hex</sub>	1st Bit Header	
01 <sub>hex</sub>	Command Identifier	45 <sub>hex</sub> : Set antenna power.
02 <sub>hex</sub>	Antenna power	Antenna power (ERP/EIRP) in increments of $n * 0.25$ dBm.  A value of 0 turns off the antenna.  Example: An antenna power of 20 dBm corresponds to a value of 80 <sub>hex</sub>  The entered value is not saved permanently and will be reset to the default value when the Reader is rebooted.
...	None	No meaning
Last byte	2nd Bit Header	Valid data is present if the 1st and 2nd bit strings match.

#### Input Buffer: Status Message

Subaddress	Meaning	Description of Function
00 <sub>hex</sub>	1st Bit Header	
01 <sub>hex</sub>	Status code	Provides information on the status of a query.
...	None	No meaning
Last byte	2nd Bit Header	If the 1st and 2nd bit headers match, the data is valid.

**7** Device Functions

**Specific commands for BIS VU read/write heads**

**Command Identifier 46<sub>hex</sub>: Read out Transmission Power**

Reads out the current transmission power (ERP). The transmission power is returned as a value in the form of quarter dBm.

Example:

Reading out the transmission power returns the value of 54<sub>hex</sub> (= 84).

This corresponds to a transmission power of 21 dBm: 84/4 = 21

Subaddress	Meaning	Description of Function
00 <sub>hex</sub>	1st Bit Header	
01 <sub>hex</sub>	Command Identifier	46 <sub>hex</sub> : Read out antenna power.
...	None	No meaning
Last byte	2nd Bit Header	If the 1st and 2nd bit headers match, the data is valid.

If execution is successful, the response is passed to the input buffer in the following format:

Subaddress	Meaning	Description of Function
00 <sub>hex</sub>	1st Bit Header	
01 <sub>hex</sub>	Antenna power	Antenna power in increments of n * 0.25 dBm or 0 for disconnected antennae.  Example: An antenna power of 20 dBm corresponds to a value of 80 <sub>hex</sub> .
...	None	No meaning
Last byte	2nd Bit Header	Valid data is present if the 1st and 2nd bit strings match.

or

**Input Buffer: Status Message**

Subaddress	Meaning	Description of Function
00 <sub>hex</sub>	1st Bit Header	
01 <sub>hex</sub>	Status code	Provides information on the status of a query.
...	None	No meaning
Last byte	2nd Bit Header	If the 1st and 2nd bit headers match, the data is valid.

**7** Device Functions

**Specific commands for BIS VU read/write heads**

**Command Identifier 47<sub>hex</sub>: Read from Multiple Data Carriers**

The *Read from Multiple Data Carriers* reads, depending on the configured type, the EPC or the TID of all data carriers that are located in the active read/write area of the antenna.



**Note**

The length of the TID or EPC field parameters are configured on the BIS VU read/write head.

Subaddress	Meaning	Description of Function
00 <sub>hex</sub>	1st Bit Header	
01 <sub>hex</sub>	Command Identifier	47 <sub>hex</sub> : Read from multiple data carriers.
02 <sub>hex</sub>	Type	EPC (0) or TID (1)
03 <sub>hex</sub>	Max. number of data carriers	Maximum number of data carriers to be output 1...255, (0 = no limit). If the specification is greater than the maximum specification of the connected heads, the lower value applies.
04 <sub>hex</sub>	Data carrier selection	All = 0 / Selected = 1
...	None	No meaning
Last byte	2nd Bit Header	If the 1st and 2nd bit headers match, the data is valid.

If the EPCs transfer with the length of 12 bytes, the response in the input buffer is as follows:

Subaddress	Meaning	Description of Function
00 <sub>hex</sub>	1st Bit Header	
01 <sub>hex</sub>	No. of tags	
02 <sub>hex</sub>	Number of bytes per EPC	12 This corresponds to the length of the longest transmitted EPC configured in the device. EPCs shorter than this length are output right-justified and filled with zeros on the left. In the following, the (number of data carriers read) × (number of bytes per EPC) are transmitted. For 64 bytes per EPC, the actual EPC length in ASCII is specified in the 1st and 2nd byte of the EPC.
03 <sub>hex</sub>	EPC 1	EPC data uppermost address
...	...	...
...	EPC 1	EPC data lowermost address
...	EPC 2	EPC data uppermost address
...	...	...
...	EPC 2	EPC data lowermost address
...	...	...
...	EPC n	EPC data uppermost address
...	...	...
...	EPC n	EPC data lowermost address
Last byte	2nd Bit Header	If the 1st and 2nd bit headers match, the data is valid.

**7** Device Functions

**Specific commands for BIS VU read/write heads**

**i Note**

As circumstances require, the data must be transmitted over multiple BUS cycles.

Example of a received data frame with 2 EPCs and 12 bytes per EPC (Illustration without bit headers):.

EPC 1: E2 FF 00 00 E2 11 90 22 E2 03 01 27  
 EPC 2: E2 00 90 51 32 05 01 74 07 80 C5 BE

```
000000: 02 0c 27 01 03 e2 22 90 11 e2 00 00 ff e2 be c5
000010: 80 07 74 01 05 32 51 90 00 e2
```

If the EPCs transfer with the length of 64 bytes, the response in the input buffer is as follows:

Subaddress	Meaning	Description of Function
00 <sub>hex</sub>	1st Bit Header	
01 <sub>hex</sub>	No. of tags	
02 <sub>hex</sub>	Number of bytes per EPC	64 This corresponds to the length of the longest transmitted EPC configured in the device. EPCs shorter than this length are output right-justified and filled with zeros on the left. In the following, the (number of data carriers read) × (number of bytes per EPC) are transmitted. For 64 bytes per EPC, the actual EPC length in ASCII is specified in the 1st and 2nd byte of the EPC.
03 <sub>hex</sub>	EPC 1 Length	MSB Length (ASCII)
04 <sub>hex</sub>	EPC 1 Length	LSB Length (ASCII)
05 <sub>hex</sub>	EPC 1	EPC data uppermost address
...	...	...
...	EPC 1	EPC data lowermost address
	EPC 2 Length	MSB Length (ASCII)
	EPC 2 Length	LSB Length (ASCII)
...	EPC 2	EPC data uppermost address
...	...	...
	EPC 2	EPC data lowermost address
	EPC n Length	MSB Length (ASCII)
	EPC n Length	LSB Length (ASCII)
...	...	...
...	EPC n	EPC data uppermost address
...	...	...
	EPC n	EPC data lowermost address
Last byte	2nd Bit Header	If the 1st and 2nd bit headers match, the data is valid.

**i Note**

As circumstances require, the data must be transmitted over multiple BUS cycles.

## 7 Device Functions

**Specific  
commands for  
BIS VU read/write  
heads**

Example of a received data frame with 2 EPCs and 64 bytes per EPC  
(Illustration without bit headers):

EPC 1

Length: 48 bytes (34<sub>hex</sub> 38<sub>hex</sub>)

EPC: E2 FF 00 00 E2 11 90 22 E2 03 01 27 33 44 55 66  
77 88 99 AC 01 02 03 04 05 06 07 08 09 0A 0B 0C  
00 00 00 00 00 00 00 00 00 00 00 00 00 00 AA BB

EPC 2

Length: 12 bytes (31<sub>hex</sub> 32<sub>hex</sub>)

EPC: E2 00 90 51 32 05 01 74 07 80 C5 BE

Data: 000000: 02 40 34 38 00 00 00 00 00 00 00 00 00 00 00 00  
000010: 00 00 bb aa 00 00 00 00 00 00 00 00 00 00 00 00  
000020: 00 00 0c 0b 0a 09 08 07 06 05 04 03 02 01 ac 99  
000030: 88 77 66 55 44 33 27 01 03 e2 22 90 11 e2 00 00  
000040: ff e2 31 32 00 00 00 00 00 00 00 00 00 00 00 00  
000050: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00  
000060: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00  
000070: 00 00 00 00 00 00 be c5 80 07 74 01 05 32 51 90  
000080: 00 e2

**7** Device Functions

**Specific commands for BIS VU read/write heads**

**Command Identifier 48<sub>hex</sub>: Write Parameters**

The *Write Parameters* command transfers parameters to the BIS VU read/write that affect its behavior.

Subaddress	Meaning	Description of Function
00 <sub>hex</sub>	1st Bit Header	
01 <sub>hex</sub>	Command Identifier	48 <sub>hex</sub> : Write parameters.
02 <sub>hex</sub>	Parameter (Low Byte)	Parameter number
03 <sub>hex</sub>	Parameter (High Byte)	Parameter number
04 <sub>hex</sub>	Length	Length of the parameter in bytes
...	None	No meaning
Last byte	2nd Bit Header	If the 1st and 2nd bit headers match, the data is valid.

Data is accepted from the processor unit only after the command has been accepted by the processor unit and acknowledged.

Subaddress	Meaning	Description of Function
00 <sub>hex</sub>	1st Bit Header	
01 <sub>hex</sub>	Data	Parameter data
...	Data	Parameter data
...	None	No meaning
Last byte	2nd Bit Header	If the 1st and 2nd bit headers match, the data is valid.

Numerical parameters, consisting of more than 8 bits (1 byte), are transmitted with the LSB first. Example: The 32-bit value 00000602<sub>hex</sub> is transmitted as a byte sequence 02 06 00 00.

**Input Buffer: Status Message**

Subaddress	Meaning	Description of Function
00 <sub>hex</sub>	1st Bit Header	
01 <sub>hex</sub>	Status code	Provides information on the status of a query.
...	None	No meaning
Last byte	2nd Bit Header	If the 1st and 2nd bit headers match, the data is valid.

## 7 Device Functions

### Specific commands for BIS VU read/write heads

#### Command Identifier 49<sub>hex</sub>: Read Parameters

Reads out the parameter values that are currently set in the read/write head.

Subaddress	Meaning	Description of Function
00 <sub>hex</sub>	1st Bit Header	
01 <sub>hex</sub>	Command Identifier	49 <sub>hex</sub> : Read parameters.
02 <sub>hex</sub>	Parameter (Low Byte)	Parameter number
03 <sub>hex</sub>	Parameter (High Byte)	Parameter number
...	None	No meaning
Last byte	2nd Bit Header	If the 1st and 2nd bit headers match, the data is valid.

If execution is successful, the response is passed to the input buffer in the following format:

Subaddress	Meaning	Description of Function
00 <sub>hex</sub>	1st Bit Header	
01 <sub>hex</sub>	No. of bytes	Number of bytes of the parameter that is transmitted in the subsequent cycles.
02 <sub>hex</sub>	Data	Parameter data
...	Data	Parameter data
...	Data	Parameter data
...	Data	Parameter data
Last byte	2nd Bit Header	If the 1st and 2nd bit headers match, the data is valid.

Numerical parameters, consisting of more than 8 bits (1 byte), are transmitted with the LSB first. Example: The 32-bit value 00000602<sub>hex</sub> is transmitted as a byte sequence 02 06 00 00.

or

#### Input Buffer: Status Message

Subaddress	Meaning	Description of Function
00 <sub>hex</sub>	1st Bit Header	
01 <sub>hex</sub>	Status code	Provides information on the status of a query.
...	None	No meaning
Last byte	2nd Bit Header	If the 1st and 2nd bit headers match, the data is valid.



**7** Device Functions

**Specific commands for BIS VU read/write heads**

**Command Identifier 50<sub>hex</sub>: Kill**

The *Kill* command deactivates a data carrier previously selected with the Select command.

**i Note**  
**Executing the Kill command permanently deactivates the selected data carrier.**  
**The deactivation cannot be undone.**

**i Note**  
 In order to execute the Kill command, a Kill password must first be set and written to the data carrier.  
 Information about password protection and about locking and unlocking ("Lock") of UHF RFID data carriers can be found in the UHF RFID standards EPCglobal™ Radio Frequency Identity Protocols Class-1 Generation-2 UHF RFID and ISO IEC 18000-63.  
 The EPCglobal™ standard is available online at [www.gs1.org/standards](http://www.gs1.org/standards).

Subaddress	Meaning	Description of Function
00 <sub>hex</sub>	1st Bit Header	
01 <sub>hex</sub>	Command Identifier	50 <sub>hex</sub> : Kill
02 <sub>hex</sub>	Password 1	1st byte password
03 <sub>hex</sub>	Password 2	2nd byte password
04 <sub>hex</sub>	Password 3	3rd byte password
	Password 4 (High Byte)	4th byte password
...	None	No meaning
Last byte	2nd Bit Header	If the 1st and 2nd bit headers match, the data is valid.

or

**Input Buffer: Status Message**

Subaddress	Meaning	Description of Function
00 <sub>hex</sub>	1st Bit Header	
01 <sub>hex</sub>	Status code	Provides information on the status of a query.
...	None	No meaning
Last byte	2nd Bit Header	If the 1st and 2nd bit headers match, the data is valid.

**7** Device Functions

**Specific commands for BIS VU read/write heads**

**Command Identifier 53<sub>hex</sub>: Bulk Read**

The *Bulk Read* command reads the data from a data carrier population. Optionally from all of the data carriers that are found in the active read/write zone of the antenna or from a subset that was previously selected with the Select command.

The Bulk Read command first reports only the number of data carriers that were detected in the active field of the antenna. The data in the data carriers is then read out and transmitted to the controller.

If the data carriers are removed from the active field of the antenna in between the detection and read out stages or if they cannot be successfully read out for other reasons, erroneous data may occur. In which case, the data will be marked as invalid via a check byte at the end of the data block and transmitted to the controller.

Data blocks marked as valid in their check bytes can be used without restrictions.

A maximum of 255 bytes from 255 data carriers can be read at a time.

Subaddress	Meaning	Description of Function
00 <sub>hex</sub>	1st Bit Header	
01 <sub>hex</sub>	Command Identifier	53 <sub>hex</sub> : Bulk Read.
02 <sub>hex</sub>	Start address (Low Byte)	Start address for reading.
03 <sub>hex</sub>	Start address (High Byte)	Start address for reading.
04 <sub>hex</sub>	No. of bytes (Low Byte)	Number of bytes to be read starting from the start address.
05 <sub>hex</sub>	No. of bytes (High Byte)	Number of bytes to be read starting from the start address.
06 <sub>hex</sub>	Data carrier selection	All = 0 / Selected = 1
07 <sub>hex</sub>	Max. Tags	Maximum number of tags.
...	None	No meaning
Last byte	2nd Bit Header	If the 1st and 2nd bit headers match, the data is valid.

**7** Device Functions

**Specific commands for BIS VU read/write heads**

If execution is successful, the response is passed to the input buffer in the following format:

Subaddress	Meaning	Description of Function
00 <sub>hex</sub>	1st Bit Header	
01 <sub>hex</sub>	No. of tags	Number of detected tags
02 <sub>hex</sub>	Number of Bytes per Tag	Bytes to be transmitted per tag.
03 <sub>hex</sub>	Data 1 [0]	Transmission of the 1st byte that was read from the 1st data carrier.
...	Data 1 [1]	Transmission of the 2nd byte that was read from the 1st data carrier.
...	Data 1 [...]	Additional data from the 1st data carrier.
...	Check Byte 1	A check byte is transmitted in the last byte from the first data carrier, which indicates whether the data read is valid: 00 <sub>hex</sub> : Data valid FF <sub>hex</sub> : Data invalid
...	Data 2 [0]	Transmission of the 1st byte that was read from the 2nd data carrier.
...	Data 2 [1]	Transmission of the 2nd byte that was read from the 2nd data carrier.
...	Data 2 [...]	Additional data from the 2nd data carrier.
...	Check Byte 2	A check byte is transmitted in the last byte from the second data carrier, which indicates whether the data read is valid: 00 <sub>hex</sub> : Data valid FF <sub>hex</sub> : Data invalid
...	...	...
...	Data n [0]	Transmission of the 1st byte that was read from the n-th data carrier.
...	Data n [1]	Transmission of the 2nd byte that was read from the n-th data carrier.
...	Data n [...]	Additional data from the n-th data carrier.
...	Check Byte n	A check byte is transmitted in the last byte from the n-th data carrier, which indicates whether the data read is valid: 00 <sub>hex</sub> : Data valid FF <sub>hex</sub> : Data invalid
Last byte	2nd Bit Header	If the 1st and 2nd bit headers match, the data is valid.

**7** Device Functions

**Specific commands for BIS VU read/write heads**

**Command Identifier 54<sub>hex</sub>: Bulk Write**

The *Bulk Write* command writes data to a data carrier population. Optionally to all of the data carriers that are found in the active read/write zone of the antenna or from a subset that was previously selected with the Select command.

Subaddress	Meaning	Description of Function
00 <sub>hex</sub>	1st Bit Header	
01 <sub>hex</sub>	Command Identifier	54 <sub>hex</sub> : Bulk Write.
02 <sub>hex</sub>	Start address (Low Byte)	Start address to be written from.
03 <sub>hex</sub>	Start address (High Byte)	Start address to be written from.
04 <sub>hex</sub>	Number of bytes (low byte)	Number of bytes to be written from the start address.
05 <sub>hex</sub>	No. of bytes (High Byte)	Number of bytes to be written from the start address.
06 <sub>hex</sub>	Data carrier selection	All = 0 / Selected = 1
07 <sub>hex</sub>	Max. Tags	Maximum number of tags.
...	None	No meaning
Last byte	2nd Bit Header	If the 1st and 2nd bit headers match, the data is valid.

Data is accepted from the processor unit only after the command has been accepted by the processor unit and acknowledged.

Subaddress	Meaning	Description of Function
00 <sub>hex</sub>	1st Bit Header	
01 <sub>hex</sub>	Data	Transmission of the data that is to be written from the data carriers.
...	Data	Transmission of the data that is to be written from the data carriers.
...	None	No meaning
Last byte	2nd Bit Header	If the 1st and 2nd bit headers match, the data is valid.

While the command is running (AA = 1, AE = 0, AF = 0), the current status is output in the input buffer.

Subaddress	Meaning	Description of Function
00 <sub>hex</sub>	1st Bit Header	AA = 1, AE = 0, AF = 0: Command is running.
01 <sub>hex</sub>	No. of tags	Number of detected tags
02 <sub>hex</sub>	Number of the Tag being Processed	0...255
...	None	No meaning
Last byte	2nd Bit Header	If the 1st and 2nd bit headers match, the data is valid.

**7** Device Functions

**Specific commands for BIS VU read/write heads**

Upon successful execution (AE = 1, AF = 0), the number of written data carriers is transmitted into the input buffer in the following format:

Subaddress	Meaning	Description of Function
00 <sub>hex</sub>	1st Bit Header	AE = 1, AF = 0: Command finished.
01 <sub>hex</sub>	No. of tags	Number of detected tags.
02 <sub>hex</sub>	Number of Successfully Written Data Carriers	0...255
...	None	No meaning
Last byte	2nd Bit Header	If the 1st and 2nd bit headers match, the data is valid.

or

**Input Buffer: Status Message**

Subaddress	Meaning	Description of Function
00 <sub>hex</sub>	1st Bit Header	AF = 1: Status message
01 <sub>hex</sub>	Status code	Provides information on the status of a query.
...	None	No meaning
Last byte	2nd Bit Header	If the 1st and 2nd bit headers match, the data is valid.

## 7 Device Functions

### Specific commands for BIS VU read/write heads

#### Command Identifier 55<sub>hex</sub>: Return Number of Tags

This command returns the number of data carriers that were found in the active read/write zone of the antenna. Optionally, the total number of data carriers or the number of data carriers selected with the Select command.

Subaddress	Meaning	Description of Function
00 <sub>hex</sub>	1st Bit Header	
01 <sub>hex</sub>	Command Identifier	55 <sub>hex</sub> : Return Number of Tags.
02 <sub>hex</sub>	Data carrier selection	All = 0 / Selected = 1
...	None	No meaning
Last byte	2nd Bit Header	If the 1st and 2nd bit headers match, the data is valid.

If execution is successful, the response is passed to the input buffer in the following format:

Subaddress	Meaning	Description of Function
00 <sub>hex</sub>	1st Bit Header	
01 <sub>hex</sub>	Number of data carriers read	0...255
...	None	No meaning
Last byte	2nd Bit Header	If the 1st and 2nd bit headers match, the data is valid.

If no tag is identified, this command returns the number "0" and no error message.

or

#### Input Buffer: Status Message

Subaddress	Meaning	Description of Function
00 <sub>hex</sub>	1st Bit Header	
01 <sub>hex</sub>	Status code	Provides information on the status of a query.
...	None	No meaning
Last byte	2nd Bit Header	If the 1st and 2nd bit headers match, the data is valid.

**7** Device Functions

**Specific commands for BIS VU read/write heads**

**Command Identifier 56<sub>hex</sub>: Get RSSI (Receive Signal Strength Indicator)**

This command returns the RSSI of a data carrier previously selected with the Select command. The RSSI is a value which is proportional to the signal strength of the received response signal from the data carrier.

Subaddress	Meaning	Description of Function
00 <sub>hex</sub>	1st Bit Header	
01 <sub>hex</sub>	Command Identifier	56 <sub>hex</sub> : Get RSSI
02 <sub>hex</sub>	RSSI Type	0: Real-time RSSI 1: Pilot Tone RSSI 2: Data RSSI
...	None	No meaning
Last byte	2nd Bit Header	If the 1st and 2nd bit headers match, the data is valid.

The RSSI value is returned in the form of an I component and a Q-component as a power level measured in dBm.

Subaddress	Meaning	Description of Function
00 <sub>hex</sub>	1st Bit Header	
01 <sub>hex</sub>	I-value	
02 <sub>hex</sub>	Q-value	
...	None	No meaning
Last byte	2nd Bit Header	If the 1st and 2nd bit headers match, the data is valid.

or

**Input Buffer: Status Message**

Subaddress	Meaning	Description of Function
00 <sub>hex</sub>	1st Bit Header	
01 <sub>hex</sub>	Status code	Provides information on the status of a query.
...	None	No meaning
Last byte	2nd Bit Header	If the 1st and 2nd bit headers match, the data is valid.

**7** Device Functions

**Specific commands for BIS VU read/write heads**

**57<sub>hex</sub>: Lock**

The Lock command can block read or write access, as well as access of any kind, to memory areas (RES, EPC, TID, USER) of a UHF data carrier. Depending on the level of security, the memory areas can be password protected or completely blocked. The Mask and Action fields specify which memory areas receive a new Lock Status and how these should appear. Using Bit Masks allows the Lock Status of multiple memory areas to be changed at the same time.



**Note**

In order to successfully execute the Lock command, it is necessary to first provide the correct Access Password for the data carrier via a Write Parameter command. Passwords (Access and Kill) are stored in the *Reserved* memory area.

Mask: Bit Mask (16-Bit), used to determine which memory area of the selected data carrier should be processed with respect to its Lock Status.

- 0: Memory area is not affected by the *Action* field
- 1: Memory area is affected by the *Action* field

Action: Bit Mask (16-Bit), used to determine how the Lock Status of the respective memory areas should be changed.  
 The Lock Status can be set for individual memory areas by setting or resetting the *Lock* and *Permalock* bits.

Bit No.	7	6	5	4	3	2	1	0
Memory area	Access PW	Access PW	EPC	EPC	TID	TID	USER	USER
Mask[0]	Mask	Mask	Mask	Mask	Mask	Mask	Mask	Mask
Action[0]	Lock	Perma-lock	Lock	Perma-lock	Lock	Perma-lock	Lock	Perma-lock

Bit No.	15	14	13	12	11	10	9	8
Memory area	Not used						Kill PW	Kill PW
Mask[1]							Mask	Mask
Action[1]							Lock	Perma-lock

Lock Status of the *EPC*, *TID* and *USER* memory areas:

Lock	Permalock	Lock Status
0	0	Read and Write: No Password
0	1	Read and Write: No Password (State can no longer be changed)
1	0	Read: No Password Write: Access Password
1	1	Read: No Password Write: Access Password (State can no longer be changed)



**7** Device Functions

**Specific commands for BIS VU read/write heads**

**i Note**  
 The *TID* memory area is inherently read-only regardless of the Lock Status and can only be read.

Lock Status of the *Reserved* memory area (*Access Password* and *Kill Password*)

Lock	Permalock	Lock Status
0	0	Read and Write: No Password
0	1	Read and Write: No Password (State can no longer be changed)
1	0	Read and Write: Access Password
1	1	Read and Write: Not Possible (State can no longer be changed)

Subaddress	Meaning	Description of Function
00 <sub>hex</sub>	1st Bit Header	
01 <sub>hex</sub>	Command Identifier	57 <sub>hex</sub> : Lock.
02 <sub>hex</sub>	Mask[0]	
03 <sub>hex</sub>	Mask[1]	
04 <sub>hex</sub>	Action[0]	
05 <sub>hex</sub>	Action[1]	
...	None	No meaning
Last byte	2nd Bit Header	If the 1st and 2nd bit headers match, the data is valid.

**Input Buffer: Status Message**

Subaddress	Meaning	Description of Function
00 <sub>hex</sub>	1st Bit Header	
01 <sub>hex</sub>	Status code	Provides information on the status of a query.
...	None	No meaning
Last byte	2nd Bit Header	If the 1st and 2nd bit headers match, the data is valid.

**7** Device Functions

**BIS M-41\_ compatibility mode**

**Command Identifier 58<sub>hex</sub>: Activate Custom Parameters**

Places the BIS V processor unit into the BIS M-41\_ compatibility mode for use of custom read/write commands in connection with BIS M - 1\_ \_ - 07 type data carriers.

Subaddress	Meaning	Description of Function
00 <sub>hex</sub>	1st Bit Header	
01 <sub>hex</sub>	Command Identifier	58 <sub>hex</sub> : Set Custom Parameters
02 <sub>hex</sub>	Custom Parameter	Read/Write with Custom Option 0: deactivated 1: activated
...	None	No meaning
Last byte	2nd Bit Header	If the 1st and 2nd bit headers match, the data is valid.

or

**Input Buffer: Status Message**

Subaddress	Meaning	Description of Function
00 <sub>hex</sub>	1st Bit Header	
01 <sub>hex</sub>	Status code	Provides information on the status of a query.
...	None	No meaning
Last byte	2nd Bit Header	If the 1st and 2nd bit headers match, the data is valid.

**Communication**

Communication between the controlling system and processor unit is defined by a trace. Communication between the host control system and the processor unit is implemented using a control bit in the output and input buffers.

**Basic sequence**

1. The controller sends a command identifier to the processor unit in the output buffer with the AV bit set.  
The AV bit tells the processor unit that a job is starting and that the transmitted data is valid.
2. The processor unit accepts the job and confirms the job by setting the AA bit in the input buffer.
3. If additional data needs to be exchanged for the job, readiness for additional data exchange is indicated by inverting the TI and TO toggle bits.
4. The processor unit has correctly executed the job and sets the AE bit into the input buffer.
5. The controller has accepted all of the data. The AV bit in the output buffer is reset.
6. The processor unit resets all of the control bits set in the input buffer during the job (AA bit, AE bit). The processor unit is ready for the next job.

**Read/write times**



**Note**

All specifications are typical values. Deviations are possible depending on the application and combination of R/W head and data carrier.  
 The specifications apply to static operation; no CRC<sub>16</sub> data checking.  
 All specified read/write times are based on the communication between the data carrier and the read/write head. The times for the data communication between the processor unit and the host control system are not included.

**7** Device Functions

For read/write heads BIS VM

**Mifare:**

<b>Read times Data carrier with 16 bytes per block</b>	
Data carrier detection	~ 20 ms
Read bytes 0 to 15	~ 25 ms
For each additional 16-byte block started	~ 10 ms

<b>Write times Data carrier with 16 bytes per block</b>	
Data carrier detection	~ 20 ms
Write bytes 0 to 15	~ 60 ms
For each additional 16-byte block started	~ 30 ms

**ISO 15693:**

<b>Read times Data carrier with 16 bytes per block</b>	
Data carrier detection	~ 20 ms
Read bytes 0 to 15	~ 25 ms
For each additional 16-byte block started	~ 10 ms

<b>Write times Data carrier with 16 bytes per block</b>		
	FRAM (BIS M-1__-02/20)	EEPROM (BIS M-1__-03/07/08)
Data carrier detection	~ 20 ms	~ 20 ms
Write bytes 0 to 15	~ 60 ms	~ 80 ms
For each additional 16-byte block started	~ 25 ms	~ 80 ms

**High speed\*:**

<b>Read times Data carrier with 64 bytes per block</b>	
Data carrier detection	~ 20 ms
Read bytes 0 to 63	~ 14 ms
For each additional 64-byte block started	~ 6 ms

<b>Write times Data carrier with 64 bytes per block</b>	
Data carrier detection	~ 20 ms
Write bytes 0 to 63	~ 30 ms
For each additional 64-byte block started	~ 15 ms

\*These times apply only for the combination of BIS VM-3\_\_-401-S4 read/write head with BIS M-1\_\_-11/A, BIS M-1\_\_-13/A, BIS M-1\_\_-14/A, or BIS M-1\_\_-15/A data carriers.

**7** Device Functions

For read/write heads BIS VL

**Read times:**

Data carrier with 16 bytes per block	BIS L-1_ _
Data carrier detection	~ 110 ms
Read bytes 0 to 15	~ 175 ms
For each additional 16-byte block started	~ 40 ms

**Data carrier BIS L-2\_ \_**

Data carrier detection + Read data carrier ≤ 140 ms

**Write times:**

Data carrier with 16 bytes per block	BIS L-1_ _
Data carrier detection	~ 110 ms
Write bytes 0 to 15	~ 285 ms
For each additional 16-byte block started	~ 100 ms

**Data carrier BIS L-2\_ \_**

Writing not possible

For read/write heads BIS C

**Read times in static mode**

Data carrier with 32 bytes per block	
No. of bytes	Read time [ms]
0 to 31	110
For each additional 32-byte block started	120

Data carrier with 64 bytes per block	
No. of bytes	Read time [ms]
0 to 63	220
For each additional 64-byte block started	230

**Write times in static mode**

Data carrier with 32 bytes per block	
No. of bytes	Read time [ms]
0 to 31	110 + n * 10
≥ 32 bytes	y * 120 + n * 10

Data carrier with 64 bytes per block	
No. of bytes	Read time [ms]
0 to 63	220 + n * 10
≥ 64 bytes	Y * 230 + n * 10

n = Number of contiguous bytes to write  
y = Number of blocks to be processed

**7** Device Functions

For read/write heads BIS C

Example: 17 bytes should be written starting at address 187. Data carrier = 32 bytes per block. Blocks 5 and 6 are processed, since the start address 187 is in block 5 and end address 203 is in block 6.

$$t = 2 * 120 + 17 * 10 = 410$$

**Read times within the first block in dynamic mode**

Data carrier with 32 bytes per block	
No. of bytes	Read time [ms]
0 to 3	14
For each additional byte	3,5
0 to 31	112

Data carrier with 64 bytes per block	
No. of bytes	Read time [ms]
0 to 3	14
For each additional byte	3,5
0 to 63	224

m = Highest address to read  
 Formula:  $t = (m + 1) * 3.5 \text{ ms}$

Example: Read 11 bytes starting at address 9. This means that the largest address to be read is 19. This yields 70 ms.

---

**i** Dynamic operation with BIS C: The times indicated apply after the data carrier has been detected. Otherwise 45 ms must be added for powering up until the data carrier is recognized. To achieve the read times specified in dynamic operation, the Tag Type parameter has to be set to "BIS C 32 Byte" or "BIS C 64 Byte" on the respective head.

---

**7** Device Functions

**7.3 Function Indicator**

The operating states of the identification system, the PROFINET interface and the IO-Link master are displayed using LEDs.

**Overview of display elements**

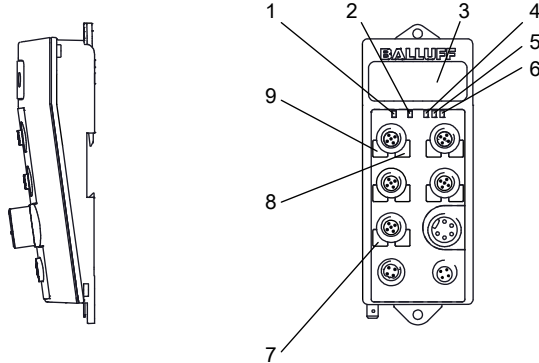


Figure 15: Function Indicators

- |                                     |                                     |
|-------------------------------------|-------------------------------------|
| <b>1</b> Ready device (RD)          | <b>6</b> Link/Activity Port 1 (L/A) |
| <b>2</b> System Failure (SF)        | <b>7</b> Service/IO-Link            |
| <b>3</b> Display                    | <b>8</b> COM R/W head               |
| <b>4</b> Bus Failure (BF)           | <b>9</b> RD R/W head                |
| <b>5</b> Link/Activity Port 2 (L/A) |                                     |

**Device LEDs**

Indicator	Function		
	Ready device (RD) (Green)	System Failure (SF) (red)	Bus Failure (BF) (Red)
Off	Device is not ready for operation	No voltage or PROFINET IO ready for operation	No voltage or PROFINET IO connection established
LED lights up	Device is ready for operation	PROFINET IO not ready	PROFINET IO not configured or not connected
LED flashes	–	DCP signal service enabled	No data exchange

**R/W head LEDs**

Indicator	Function	
	RD R/W head (Green)	COM R/W head (Yellow)
Off	Not ready	No data carrier detected
LED lights up	Ready for Operation	Data carrier detected (CP)
LED flashes	Cable break or R/W head not connected	Data carrier is being processed

## 7 Device Functions

**IO-Link port LED** The IO port is assigned an LED for displaying the operational status.

Indicator	Function	
	IO-Link	Input
Off	PROFINET IO not yet started	Signal = 0
Yellow	–	Signal = 1
Red	Error	SC*
Green	IO-Link communication active	–
Flashing green	IO-Link node missing or cable break	–

\* Short-circuit at PIN 1. In this case, the LED lights up in red.

**7** Device Functions

**7.4 Examples**

**1. Reading 30 bytes at R/W head 1, start address 10**

Once enough data has been read during the execution of the read job to fill the input buffer for R/W Head 1, the data will be transmitted to the input buffer. The AE bit is not set until the processor unit has finished the "Read" operation. The "Job End" (AE bit) response is reliably set no later than before the last data has been sent. This timing depends on the requested volume of data and the time response of the controller. In the example, the use of italics for "Set AE Bit" calls your attention to this fact.

**Control**

**Identification System**

1. Process output buffer  
 (note sequence):

01 <sub>hex</sub>	Command designator 01 <sub>hex</sub>
02 <sub>hex</sub>	Start address 0A <sub>hex</sub>
03 <sub>hex</sub>	Start address 00 <sub>hex</sub>
04 <sub>hex</sub>	No. of bytes 1E <sub>hex</sub>
05 <sub>hex</sub>	No. of bytes 00 <sub>hex</sub>
00 <sub>hex</sub> /0F <sub>hex</sub>	Set AV Bit

2. Process Input Buffer  
 (note sequence):

00 <sub>hex</sub> /0F <sub>hex</sub>	Set AA bit
01...0E <sub>hex</sub>	Enter first 14 bytes
00 <sub>hex</sub> /0F <sub>hex</sub>	Invert TO bit
00 <sub>hex</sub> /0F <sub>hex</sub>	<i>Set AE bit</i>

3. Process input buffer:

01...0E <sub>hex</sub>	Copy first 14 bytes
Process output buffer:	
00 <sub>hex</sub> /0F <sub>hex</sub>	Invert TI bit

4. Process input buffer:

01...0E <sub>hex</sub>	Enter second 14 bytes
00 <sub>hex</sub> /0F <sub>hex</sub>	Invert TO bit
00 <sub>hex</sub> /0F <sub>hex</sub>	<i>Set AE bit</i>

5. Process input buffer:

01...0E <sub>hex</sub>	Copy second 14 bytes
Process output buffer:	
00 <sub>hex</sub> /0F <sub>hex</sub>	Invert TI bit

6. Process input buffer:

01...02 <sub>hex</sub>	Enter last bytes
00 <sub>hex</sub> /0F <sub>hex</sub>	Invert TO bit
00 <sub>hex</sub> /0F <sub>hex</sub>	<i>Set AE bit</i>

7. Process input buffer:

01...02 <sub>hex</sub>	Copy last bytes
Process output buffer:	
00 <sub>hex</sub> /0F <sub>hex</sub>	Reset AV bit

8. Process input buffer:

00 <sub>hex</sub> /0F <sub>hex</sub>	Reset AA and AE bits
--------------------------------------	----------------------



**7** Device Functions

**Examples**

**2. Reading 30 bytes at R/W head 1, start address 10, problem during reading**



**Note**

If a problem occurs, the AF bit is set with the corresponding status number instead of the AE bit. Setting the AF bit cancels the job and declares it as finished.

**Control**

1. Process output buffer  
(note sequence):

01 <sub>hex</sub>	Command designator 01 <sub>hex</sub>
02 <sub>hex</sub>	Start address 0A <sub>hex</sub>
03 <sub>hex</sub>	Start address 00 <sub>hex</sub>
04 <sub>hex</sub>	No. of bytes 1E <sub>hex</sub>
05 <sub>hex</sub>	No. of bytes 00 <sub>hex</sub>
00 <sub>hex</sub> /0F <sub>hex</sub>	Set AV Bit

3. Process input buffer:

01 <sub>hex</sub>	Copy status number
-------------------	--------------------

Process output buffer:

00 <sub>hex</sub> /0F <sub>hex</sub>	Reset AV bit
--------------------------------------	--------------

**Identification System**

2. Process Input Buffer  
(note sequence):

**If problem occurs immediately!**

00 <sub>hex</sub> /0F <sub>hex</sub>	Set AA bit
01 <sub>hex</sub>	Enter status number
00 <sub>hex</sub> /0F <sub>hex</sub>	Set AF bit

4. Process input buffer:

00 <sub>hex</sub> /0F <sub>hex</sub>	Reset AA and AF bits
--------------------------------------	----------------------

7 Device Functions

Examples

3. Reading 30 bytes at R/W head 1, start address 10, problem during reading



**Note**

If a problem occurs after transmission of the data has started, the AF bit is provided instead of the AE bit together with a corresponding status number. The AF status message is dominant. Which data is incorrect cannot be specified. Setting the AF bit cancels the job and declares it as finished.

**Control**

1. Process output buffer  
(note sequence):

01 <sub>hex</sub>	Command designator 01 <sub>hex</sub>
02 <sub>hex</sub>	Start address 0A <sub>hex</sub>
03 <sub>hex</sub>	Start address 00 <sub>hex</sub>
04 <sub>hex</sub>	No. of bytes 1E <sub>hex</sub>
05 <sub>hex</sub>	No. of bytes 00 <sub>hex</sub>
00 <sub>hex</sub> /0F <sub>hex</sub>	Set AV Bit

3. Process input buffer:

01...0E <sub>hex</sub>	Copy first 14 bytes
Process output buffer:	
00 <sub>hex</sub> /0F <sub>hex</sub>	Invert TI bit

5. Process input buffer:

01...0E <sub>hex</sub>	Copy status number
Process output buffer:	
00 <sub>hex</sub> /0F <sub>hex</sub>	Reset AV bit

**Identification System**

2. Process Input Buffer  
(note sequence):

00 <sub>hex</sub> /0F <sub>hex</sub>	Set AA bit
01...0E <sub>hex</sub>	Enter first 14 bytes
00 <sub>hex</sub> /0F <sub>hex</sub>	Invert TO bit

4. Process input buffer:  
**If a problem has occurred!**

01 <sub>hex</sub>	Enter status number
00 <sub>hex</sub> /0F <sub>hex</sub>	Set AF bit

6. Process input buffer:

00 <sub>hex</sub> /0F <sub>hex</sub>	Reset AA and AF bits
--------------------------------------	----------------------

**7** Device Functions

**Examples**

**4. Writing 30 bytes at R/W head 1, start address 20**

**Control**

**Identification System**

1. Process output buffer  
(note sequence):

01 <sub>hex</sub>	Command designator 02 <sub>hex</sub>
02 <sub>hex</sub>	Start address 14 <sub>hex</sub>
03 <sub>hex</sub>	Start address 00 <sub>hex</sub>
04 <sub>hex</sub>	No. of bytes 1E <sub>hex</sub>
05 <sub>hex</sub>	No. of bytes 00 <sub>hex</sub>
00 <sub>hex</sub> /0F <sub>hex</sub>	Set AV Bit

2. Process Input Buffer  
(note sequence):

00 <sub>hex</sub> /0F <sub>hex</sub>	Set AA bit, invert TO bit
--------------------------------------	---------------------------

3. Process output buffer:

01...0E <sub>hex</sub>	Enter first 14 bytes
00 <sub>hex</sub> /0F <sub>hex</sub>	Invert TI bit

4. Process output buffer:

01...0E <sub>hex</sub>	Copy first 14 bytes
Process input buffer:	
00 <sub>hex</sub> /0F <sub>hex</sub>	Invert TO bit

5. Process output buffer:

01...0E <sub>hex</sub>	Enter second 14 bytes
00 <sub>hex</sub> /0F <sub>hex</sub>	Invert TI bit

6. Process output buffer:

01...0E <sub>hex</sub>	Copy second 14 bytes
Process input buffer:	
00 <sub>hex</sub> /0F <sub>hex</sub>	Invert TO bit

7. Process output buffer:

01...02 <sub>hex</sub>	Enter last 2 bytes
00 <sub>hex</sub> /0F <sub>hex</sub>	Invert TI bit

8. Process output buffer:

01...02 <sub>hex</sub>	Copy last 2 bytes
Process input buffer:	
00 <sub>hex</sub> /0F <sub>hex</sub>	Set AE bit

9. Process output buffer:

00 <sub>hex</sub> /0F <sub>hex</sub>	Reset AV bit
--------------------------------------	--------------

10. Process input buffer:

00 <sub>hex</sub> /0F <sub>hex</sub>	Reset AA and AE bits
--------------------------------------	----------------------

**7** Device Functions

**Examples**

**5. Copying data from one data carrier to another**

The data from one data carrier at a read/write head (source) is copied to a data carrier in front of another read/write head (target). The data carriers have to be in front of the read/write heads (even if dynamic mode has been configured) and must have the specified address range. The command is processed in the buffer of the source head.

In the example, 17 bytes starting from address 10 of the data carrier are to be copied to the data carrier in front of read/write head 3 starting from address 35.

**Control**

**Identification System**

1. Process output buffer  
 (note sequence):

01 <sub>hex</sub>	Command designator 11 <sub>hex</sub>
02 <sub>hex</sub>	Source start address 0A <sub>hex</sub>
03 <sub>hex</sub>	Source start address 00 <sub>hex</sub>
04 <sub>hex</sub>	Target start address 23 <sub>hex</sub>
05 <sub>hex</sub>	Target start address 00 <sub>hex</sub>
06 <sub>hex</sub>	No. of bytes 11 <sub>hex</sub>
07 <sub>hex</sub>	No. of bytes 00 <sub>hex</sub>
08 <sub>hex</sub>	Target head number 03 <sub>hex</sub>
00 <sub>hex</sub> /0F <sub>hex</sub>	Set AV Bit

2. Process Input Buffer  
 (note sequence):


00 <sub>hex</sub> /0F <sub>hex</sub>	Set AA bit, Set AE bit
--------------------------------------	------------------------

3. Process output buffer:

00 <sub>hex</sub> /0F <sub>hex</sub>	Reset AV bit
--------------------------------------	--------------

4. Process input buffer:

00 <sub>hex</sub> /0F <sub>hex</sub>	Reset AA and AE bits
--------------------------------------	----------------------



**7** Device Functions

**Examples**

**6. Writing to a data carrier with a constant value**

A data carrier is to be written with 1000 bytes (constant value) starting from start address 80.

**Control**

**Identification System**

1. Process output buffer  
(note sequence):

01 <sub>hex</sub>	Command designator 32 <sub>hex</sub>
02 <sub>hex</sub>	Start address 50 <sub>hex</sub>
03 <sub>hex</sub>	Start address 00 <sub>hex</sub>
04 <sub>hex</sub>	Number of bytes E8 <sub>hex</sub>
05 <sub>hex</sub>	No. of bytes 03 <sub>hex</sub>
00 <sub>hex</sub> /0F <sub>hex</sub>	Set AV Bit

2. Process Input Buffer  
(note sequence):

00 <sub>hex</sub> /0F <sub>hex</sub>	Set AA bit, invert TO bit
--------------------------------------	---------------------------

3. Process output buffer:

01	Enter constant value
00 <sub>hex</sub> /0F <sub>hex</sub>	Invert TI bit

4. Process output buffer:

01	Copy constant value
Process input buffer:	
00 <sub>hex</sub> /0F <sub>hex</sub>	Set AE bit

5. Process output buffer:

00 <sub>hex</sub> /0F <sub>hex</sub>	Reset AV bit
--------------------------------------	--------------

6. Process input buffer:

00 <sub>hex</sub> /0F <sub>hex</sub>	Reset AA and AE bits
--------------------------------------	----------------------

**7** Device Functions

**Examples**

**7. Initializing a data carrier for CRC**

The sequence for CRC initialization is similar to a write command. The start address and the number of bytes must correspond to the maximum amount of data used. In the example the complete memory area of a data carrier (752 bytes) is used. 658 bytes on the data carrier are available as data bytes, since 94 bytes are required for the CRC.

**Control**

**Identification System**

1. Process output buffer (note sequence):

01 <sub>hex</sub>	Command designator 12 <sub>hex</sub>
02 <sub>hex</sub>	Start address 00 <sub>hex</sub>
03 <sub>hex</sub>	Start address 00 <sub>hex</sub>
04 <sub>hex</sub>	No. of bytes 92 <sub>hex</sub>
05 <sub>hex</sub>	No. of bytes 02 <sub>hex</sub>
00 <sub>hex</sub> /0F <sub>hex</sub>	Set AV Bit

2. Process Input Buffer (note sequence):

00 <sub>hex</sub> /0F <sub>hex</sub>	Set AA bit, invert TO bit
--------------------------------------	---------------------------

3. Process output buffer:

01...0E <sub>hex</sub>	Enter first 14 bytes
00 <sub>hex</sub> /0F <sub>hex</sub>	Invert TI bit

4. Process output buffer:

01...0E <sub>hex</sub>	Copy first 14 bytes
Process input buffer:	
00 <sub>hex</sub> /0F <sub>hex</sub>	Invert TO bit

5. Process output buffer:

01...0E <sub>hex</sub>	Enter second 14 bytes
00 <sub>hex</sub> /0F <sub>hex</sub>	Invert TI bit

6. Process output buffer:

01...0E <sub>hex</sub>	Copy second 14 bytes
Process input buffer:	
00 <sub>hex</sub> /0F <sub>hex</sub>	Invert TO bit

95. Process output buffer:

01...08 <sub>hex</sub>	Enter last bytes
00 <sub>hex</sub> /0F <sub>hex</sub>	Invert TI bit

96. Process output buffer:

01...08 <sub>hex</sub>	Copy last bytes
Process input buffer:	
00 <sub>hex</sub> /0F <sub>hex</sub>	Set AE bit

97. Process output buffer:

00 <sub>hex</sub> /0F <sub>hex</sub>	Reset AV bit
--------------------------------------	--------------

98. Process input buffer:

00 <sub>hex</sub> /0F <sub>hex</sub>	Reset AA and AE bits
--------------------------------------	----------------------

**7** Device Functions

**Examples**

**8. Creating a basic state for a R/W head or switching off a R/W head**

The read/write heads for the identification system can be put into a basic state independently of each other and the respective read/write head can be shut off.

**Control**

**Identification System**

1. Process output buffer:

00 <sub>hex</sub> /0F <sub>hex</sub>	Set GR bit
--------------------------------------	------------

2. Go to the default state.

Process input buffer:

00 <sub>hex</sub> /0F <sub>hex</sub>	Reset BB bit
--------------------------------------	--------------

⇒ R/W head is shut off

3. Process output buffer:

00 <sub>hex</sub> /0F <sub>hex</sub>	Reset GR bit
--------------------------------------	--------------

4. Process input buffer:

00 <sub>hex</sub> /0F <sub>hex</sub>	Set BB bit
--------------------------------------	------------

⇒ R/W head is switched on

**9. Switching off a read/write head antenna**

During normal operation, all read/write head antennas are switched on. The antenna of a respective R/W head can be switched off by setting the KA bit.

**Control**

1. Process output buffer:

00 <sub>hex</sub> /0F <sub>hex</sub>	Set KA bit
--------------------------------------	------------

The R/W head's antenna is switched back on by resetting the KA bit.

**7** Device Functions

**Examples**

**10 Reading the EPCs of multiple data carriers in front of the antenna (only BIS VU)**

**For configuration with 16-byte buffer size!**

With a maximum number of 5, EPC size of 12 bytes configured, 3 data carriers identified

**Control**

**Identification System**

1. Process output buffer (note sequence):

01 <sub>hex</sub>	Command designator 47 <sub>hex</sub>
02 <sub>hex</sub>	Type EPC 00 <sub>hex</sub>
03 <sub>hex</sub>	Max. number 05 <sub>hex</sub>
00 <sub>hex</sub> /0F <sub>hex</sub>	Set AV Bit

2. Process Input Buffer (note sequence):

00 <sub>hex</sub> /0F <sub>hex</sub>	Set AA bit
01 <sub>hex</sub>	Number of data carriers 03 <sub>hex</sub>
02 <sub>hex</sub>	Number of bytes per EPC 0C <sub>hex</sub>
03 <sub>hex</sub> ...0E <sub>hex</sub>	First EPC 12 bytes
00 <sub>hex</sub> /0F <sub>hex</sub>	Set AE bit

- 3a. Process input buffer:

01 <sub>hex</sub>	Note number of data carriers
02 <sub>hex</sub>	Save number of bytes
03 <sub>hex</sub> /0E <sub>hex</sub>	Copy first EPC 12 bytes

4. Process input buffer:

01...0C <sub>hex</sub>	Enter second EPC 12 bytes
0D <sub>hex</sub> /0E <sub>hex</sub>	Enter third EPC 2 bytes
00 <sub>hex</sub> /0F <sub>hex</sub>	Invert TO bit

- 3b. Process output buffer:

00 <sub>hex</sub> /0F <sub>hex</sub>	Invert TI bit
--------------------------------------	---------------

- 5a. Process input buffer:

01 <sub>hex</sub> ...0C <sub>hex</sub>	Copy second EPC 12 bytes
0D <sub>hex</sub> /0E <sub>hex</sub>	Copy third EPC 2 bytes

6. Process input buffer:

01 <sub>hex</sub> ...0A <sub>hex</sub>	Enter third EPC 10 bytes
00 <sub>hex</sub> /0F <sub>hex</sub>	Invert TO bit

- 5b. Process output buffer:

00 <sub>hex</sub> /0F <sub>hex</sub>	Invert TI bit
--------------------------------------	---------------

- 7a. Process input buffer:

01 <sub>hex</sub> /0A <sub>hex</sub>	Copy third EPC 10 bytes
--------------------------------------	-------------------------

8. Process input buffer:

00 <sub>hex</sub> /0F <sub>hex</sub>	Reset AA and AE bits
--------------------------------------	----------------------

- 7b. Process output buffer:

00 <sub>hex</sub> /0F <sub>hex</sub>	Reset AV bit
--------------------------------------	--------------



**7** Device Functions

**Examples**

**11. Selecting a data carrier for further processing (only BIS VU)**

**For configuration with 16-byte buffer size!**

For configuration with EPC size of 12 bytes

**Control**

**Identification System**

1. Process output buffer (note sequence):

01 <sub>hex</sub>	Command designator 40 <sub>hex</sub>
02 <sub>hex</sub>	Type EPC 00 <sub>hex</sub>
03 <sub>hex</sub>	Length of the EPC 0C <sub>hex</sub>
04 <sub>hex</sub>	Reserved 00 <sub>hex</sub>
05 <sub>hex</sub>	Reserved 00 <sub>hex</sub>
06 <sub>hex</sub>	Reserved 00 <sub>hex</sub>
00 <sub>hex</sub> /0F <sub>hex</sub>	Set AV Bit

2. Process Input Buffer (note sequence):

00 <sub>hex</sub> /0F <sub>hex</sub>	Set AA bit, Invert TO bit
--------------------------------------	---------------------------

3. Process output buffer:

01 <sub>hex</sub> ...0C <sub>hex</sub>	Enter 12 bytes EPC
00 <sub>hex</sub> /0F <sub>hex</sub>	Invert TI bit

4a. Process output buffer:

01 <sub>hex</sub> ...0C <sub>hex</sub>	Save EPC
--	----------

4b. Process input buffer:

00 <sub>hex</sub> /0F <sub>hex</sub>	Set AE bit
--------------------------------------	------------

5. Process output buffer:

00 <sub>hex</sub> /0F <sub>hex</sub>	Reset AV bit
--------------------------------------	--------------

6. Process input buffer:

00 <sub>hex</sub> /0F <sub>hex</sub>	Reset AA and AE bits
--------------------------------------	----------------------

**7** Device Functions

**Examples**

**12. Bulk Write (only BIS VU)**

Write to all data carriers that are located in front of the antenna. Write 16 bytes starting at data carrier address 3.

**Control**

**Identification System**

1. Process output buffer  
(note sequence):

01 <sub>hex</sub>	Command designator 54 <sub>hex</sub>
02 <sub>hex</sub>	Start address 03 <sub>hex</sub>
03 <sub>hex</sub>	Start address 00 <sub>hex</sub>
04 <sub>hex</sub>	No. of bytes 10 <sub>hex</sub>
05 <sub>hex</sub>	No. of bytes 00 <sub>hex</sub>
06 <sub>hex</sub>	Subset Type 00 <sub>hex</sub>
07 <sub>hex</sub>	Max Tags FF <sub>hex</sub>
00 <sub>hex</sub> /0F <sub>hex</sub>	Set AV Bit

2. Process Input Buffer  
(note sequence):

00 <sub>hex</sub> /0F <sub>hex</sub>	Set AA bit, invert TO bit
--------------------------------------	---------------------------

3. Process output buffer:

01...0E <sub>hex</sub>	Enter first 14 bytes
00 <sub>hex</sub> /0F <sub>hex</sub>	Invert TI bit

- 4a. Process output buffer:

01...0E <sub>hex</sub>	Copy first 14 bytes
------------------------	---------------------

- 4b. Process input buffer:

00 <sub>hex</sub> /0F <sub>hex</sub>	Invert TO bit
--------------------------------------	---------------

5. Process output buffer:

01...02 <sub>hex</sub>	Enter the last 2 bytes
00 <sub>hex</sub> /0F <sub>hex</sub>	Invert TI bit

- 6a. Process output buffer:

01...02 <sub>hex</sub>	Copy last 2 bytes
------------------------	-------------------

- 6b. Process input buffer:

01 <sub>hex</sub>	Enter the number of tags found
02 <sub>hex</sub>	Enter the number of successfully written tags
00 <sub>hex</sub> /0F <sub>hex</sub>	Set AE bit

7. Process input buffer:

01 <sub>hex</sub>	Copy the number of tags found
02 <sub>hex</sub>	Copy the number of successfully written tags

8. Process input buffer:

00 <sub>hex</sub> /0F <sub>hex</sub>	Reset AA and AE bits
--------------------------------------	----------------------

Process output buffer:

00 <sub>hex</sub> /0F <sub>hex</sub>	Reset AV bit
--------------------------------------	--------------

**7** Device Functions

**Examples**

**13. Bulk Read (only BIS VU)**

Read from all data carriers that are located in front of the antenna. Read 4 bytes starting at data carrier address 3.

**Control**

**Identification System**

1. Process output buffer  
(note sequence):

01 <sub>hex</sub>	Command designator 53 <sub>hex</sub>
02 <sub>hex</sub>	Start address 03 <sub>hex</sub>
03 <sub>hex</sub>	Start address 00 <sub>hex</sub>
04 <sub>hex</sub>	No. of bytes 04 <sub>hex</sub>
05 <sub>hex</sub>	No. of bytes 00 <sub>hex</sub>
06 <sub>hex</sub>	Subset Type 00 <sub>hex</sub>
07 <sub>hex</sub>	Max Tags FF <sub>hex</sub>
00 <sub>hex</sub> /0F <sub>hex</sub>	Set AV Bit

2. Process Input Buffer  
(note sequence):

00 <sub>hex</sub> /0F <sub>hex</sub>	Set AA bit
01 <sub>hex</sub>	Enter the number of tags
02 <sub>hex</sub>	Enter the number of bytes per tag
03 <sub>hex</sub> ...0E <sub>hex</sub>	Enter 12 bytes of data and the check byte
00 <sub>hex</sub> /0F <sub>hex</sub>	Invert TO bit
00 <sub>hex</sub> /0F <sub>hex</sub>	Set AE bit

3a. Process input buffer:

01 <sub>hex</sub>	Copy the number of tags
02 <sub>hex</sub>	Copy the number of bytes per tag
03 <sub>hex</sub> ...06 <sub>hex</sub>	Copy the 4th byte of data for the 1st tag
07 <sub>hex</sub>	Read the check byte
08 <sub>hex</sub> ...0b <sub>hex</sub>	Copy the 4th byte of data for the 2nd tag
0C <sub>hex</sub>	Read the check byte
0D <sub>hex</sub> /0E <sub>hex</sub>	Copy the 2nd byte of data for the 3rd tag

3b. Process output buffer:

00 <sub>hex</sub> /0F <sub>hex</sub>	Invert T1 bit
--------------------------------------	---------------

4. Process input buffer:

01 <sub>hex</sub> ...08 <sub>hex</sub>	Enter 18 bytes of data and the check byte
00 <sub>hex</sub> /0F <sub>hex</sub>	Invert TO bit
00 <sub>hex</sub> /0F <sub>hex</sub>	Set AE bit

5a. Process input buffer:

01 <sub>hex</sub> ...02 <sub>hex</sub>	Copy the 2nd byte of data for the 3rd tag
03 <sub>hex</sub>	Read the check byte
04 <sub>hex</sub> ...07 <sub>hex</sub>	Copy the 4th byte of data for the 4th tag
08 <sub>hex</sub>	Read the check byte

5b. Process output buffer:

00 <sub>hex</sub> /0F <sub>hex</sub>	Reset AV bit
--------------------------------------	--------------

6a. Process input buffer:

00 <sub>hex</sub> /0F <sub>hex</sub>	Reset AA and AE bits
--------------------------------------	----------------------

**7** Device Functions

**Examples**

**14. Reading the read/write head parameters (only BIS VU)**

Reading the parameter max EPC length (Parameter 0003<sub>hex</sub>) from one BIS VU read/write head.

**Control**

1. Process output buffer  
(note sequence):

01 <sub>hex</sub>	Command designator 49 <sub>hex</sub>
02 <sub>hex</sub>	Parameter 03 <sub>hex</sub>
03 <sub>hex</sub>	Parameter 00 <sub>hex</sub>
00 <sub>hex</sub> /0F <sub>hex</sub>	Set AV Bit

- 3a. Process input buffer:

01 <sub>hex</sub>	Read parameter length
02 <sub>hex</sub>	Copy parameter data

- 3b. Process output buffer:

00 <sub>hex</sub> /0F <sub>hex</sub>	Reset AV bit
--------------------------------------	--------------

**Identification System**

2. Process Input Buffer  
(note sequence):

00 <sub>hex</sub> /0F <sub>hex</sub>	Set AA bit
01 <sub>hex</sub>	Enter the number of parameters
02 <sub>hex</sub>	Enter parameter data
00 <sub>hex</sub> /0F <sub>hex</sub>	Set AE bit

4. Process input buffer:

00 <sub>hex</sub> /0F <sub>hex</sub>	Reset AA and AE bits
--------------------------------------	----------------------

**15. Unselect (only BIS VU)**

Undoing a data carrier selection that was made with the Select command.

**Control**

1. Process output buffer  
(note sequence):

01 <sub>hex</sub>	Command designator 41 <sub>hex</sub>
00 <sub>hex</sub> /0F <sub>hex</sub>	Set AV Bit

3. Process output buffer:

00 <sub>hex</sub> /0F <sub>hex</sub>	Reset AV bit
--------------------------------------	--------------

**Identification System**

2. Process Input Buffer  
(note sequence):

00 <sub>hex</sub> /0F <sub>hex</sub>	Set AA bit
00 <sub>hex</sub> /0F <sub>hex</sub>	Set AE bit

4. Process input buffer:

00 <sub>hex</sub> /0F <sub>hex</sub>	Reset AA and AE bits
--------------------------------------	----------------------

**7** Device Functions

**Examples**

**16. Setting the read/write head parameters (only BIS VU)**

Setting an access password (Parameter 1002<sub>hex</sub>) for accessing a password-protected data carrier.

Password: 12345678<sub>hex</sub>

**Control**

**Identification System**

1. Process output buffer  
(note sequence):

01 <sub>hex</sub>	Command designator 48 <sub>hex</sub>
02 <sub>hex</sub>	Parameter 02 <sub>hex</sub>
03 <sub>hex</sub>	Parameter 10 <sub>hex</sub>
04 <sub>hex</sub>	Parameter Length 04 <sub>hex</sub>
00 <sub>hex</sub> /0F <sub>hex</sub>	Set AV Bit

2. Process Input Buffer  
(note sequence):

00 <sub>hex</sub> /0F <sub>hex</sub>	Set AA bit, Invert TO bit
--------------------------------------	---------------------------

3. Process output buffer:

01 <sub>hex</sub>	Parameter Data 78 <sub>hex</sub>
02 <sub>hex</sub>	Parameter Data 56 <sub>hex</sub>
03 <sub>hex</sub>	Parameter Data 34 <sub>hex</sub>
04 <sub>hex</sub>	Parameter Data 12 <sub>hex</sub>
00 <sub>hex</sub> /0F <sub>hex</sub>	Invert TI bit

4a. Process output buffer:

01...04 <sub>hex</sub>	Copy parameter data
------------------------	---------------------

4b. Process input buffer:

00 <sub>hex</sub> /0F <sub>hex</sub>	Set AE bit
--------------------------------------	------------

5. Process output buffer:

00 <sub>hex</sub> /0F <sub>hex</sub>	Reset AV bit
--------------------------------------	--------------

6a. Process input buffer:

00 <sub>hex</sub> /0F <sub>hex</sub>	Reset AA and AE bits
--------------------------------------	----------------------

## 7 Device Functions

### 7.5 Display

The display provides functions for diagnosing the BIS V. This can be used to determine the IP and gateway addresses, the subnet mask, as well as the PROFINET station name. In addition, tag data, version information and the MAC address can be displayed. It is controlled using a 2-button controller.

You can navigate within a menu level by holding the Enter/Down and Cancel/Up buttons for a short time. You can switch between menu levels or confirm or cancel an action by pressing the buttons longer.



Display  
(Gray/black text,  
blue backlighting)

Enter/Down button

Cancel/Up button



**Note**

After starting the unit, the last octet of the IP address is shown on the display of the BIS V. This constitutes the default state of the display.

---




**Note**

Device settings can only be reset after a power reset without a connected network cable.

---


7 Device Functions

Reset device settings

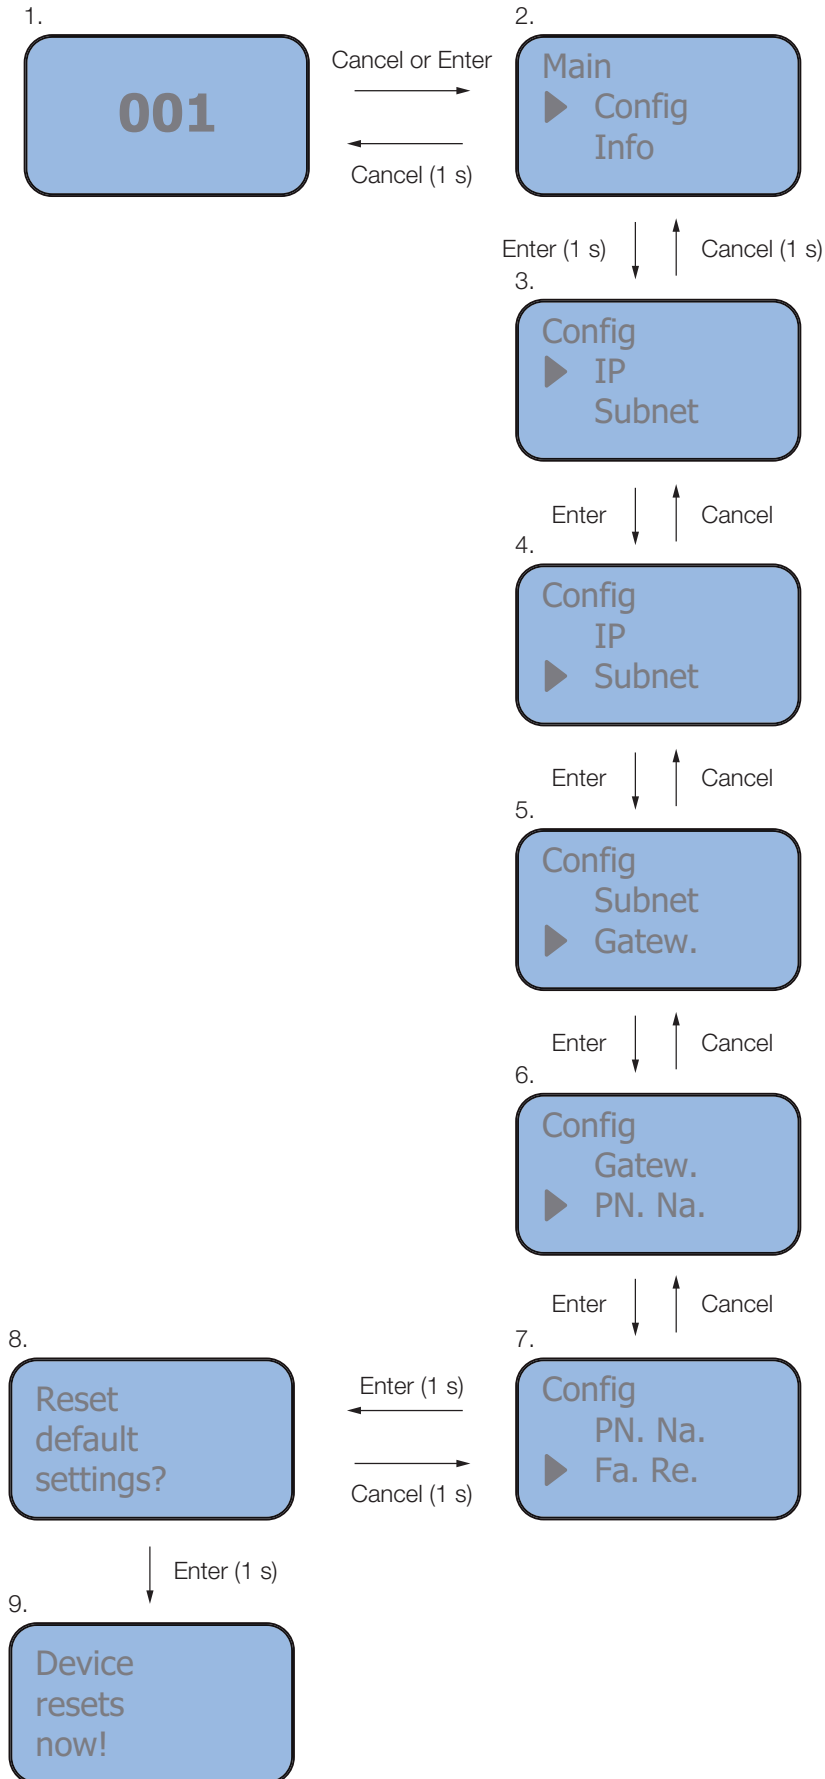

**7** Device Functions

**Displaying tag data**

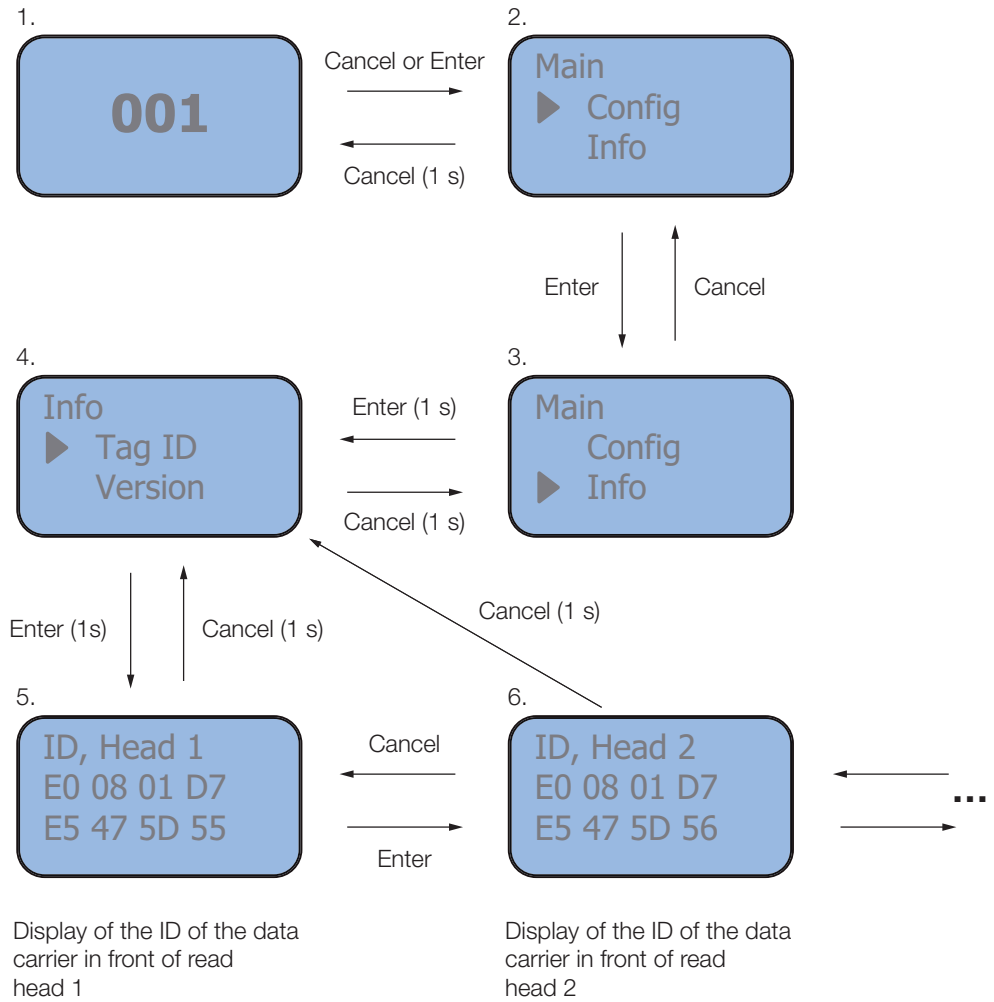


When selecting Head\_IDs 1...4 (5, 6, etc.), you can hold down Cancel for 1 second to jump back to 4.



## 7 Device Functions


### Version display

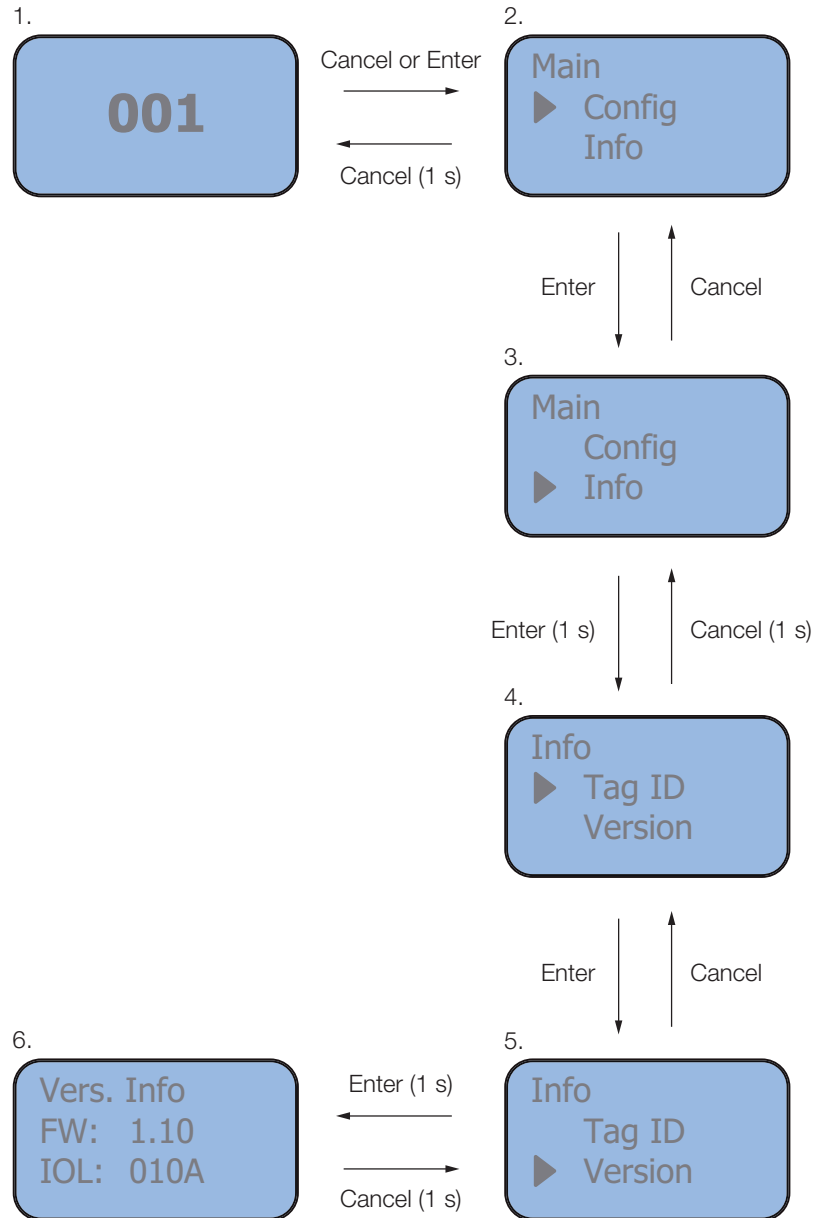

Two versions are displayed: the firmware version of the controller (here 1.00) and the version text of the IO-Link firmware (010A).


7 Device Functions

View the  
MAC address

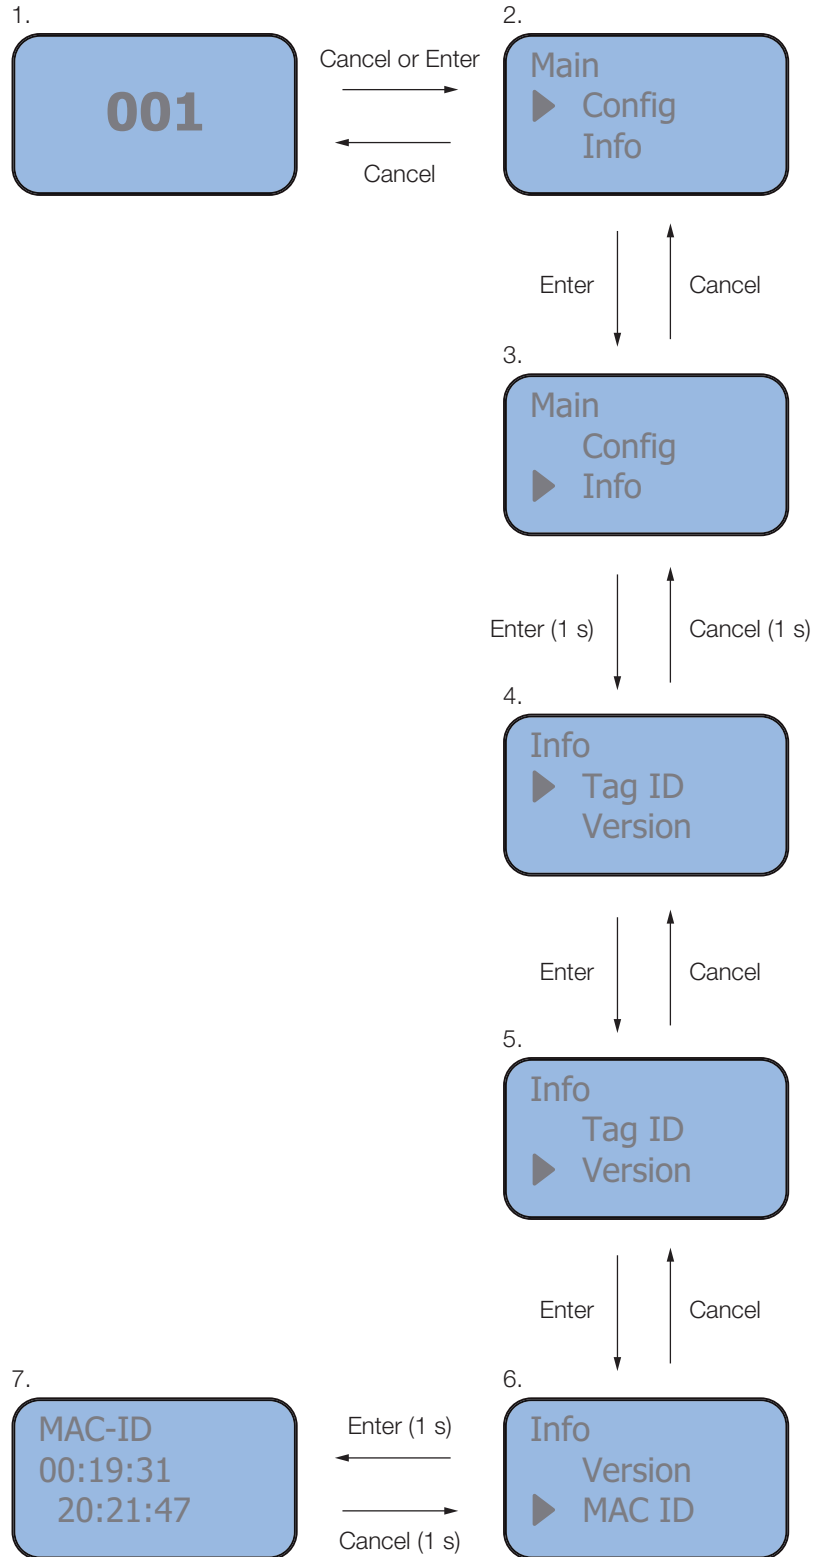


## 7 Device Functions

View the IP  
Address

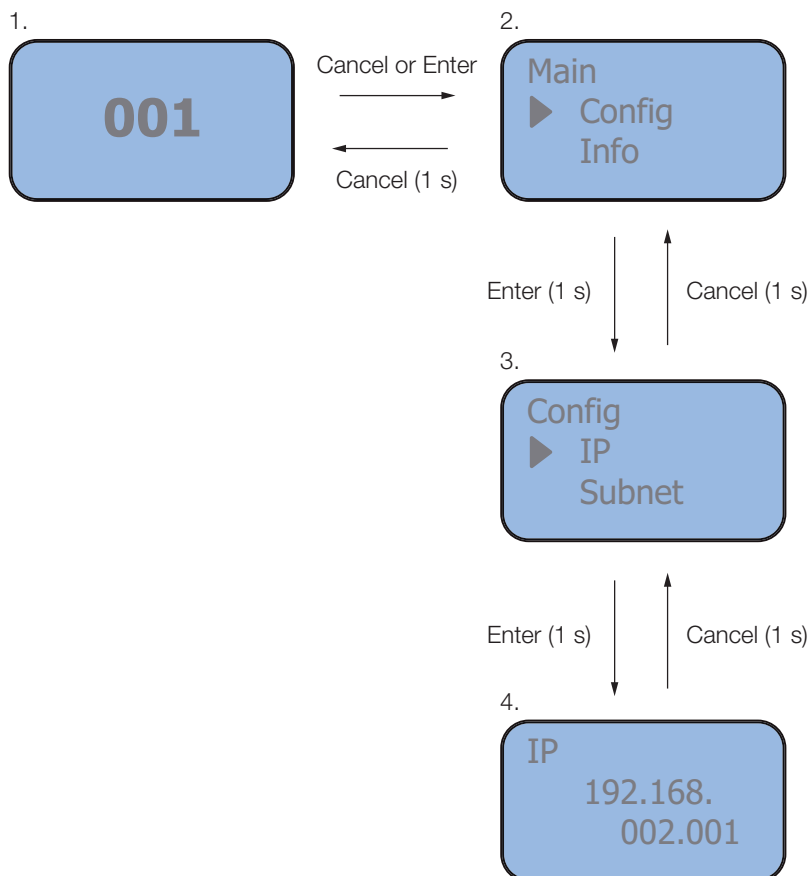


## 7 Device Functions

### View the Subnet Mask

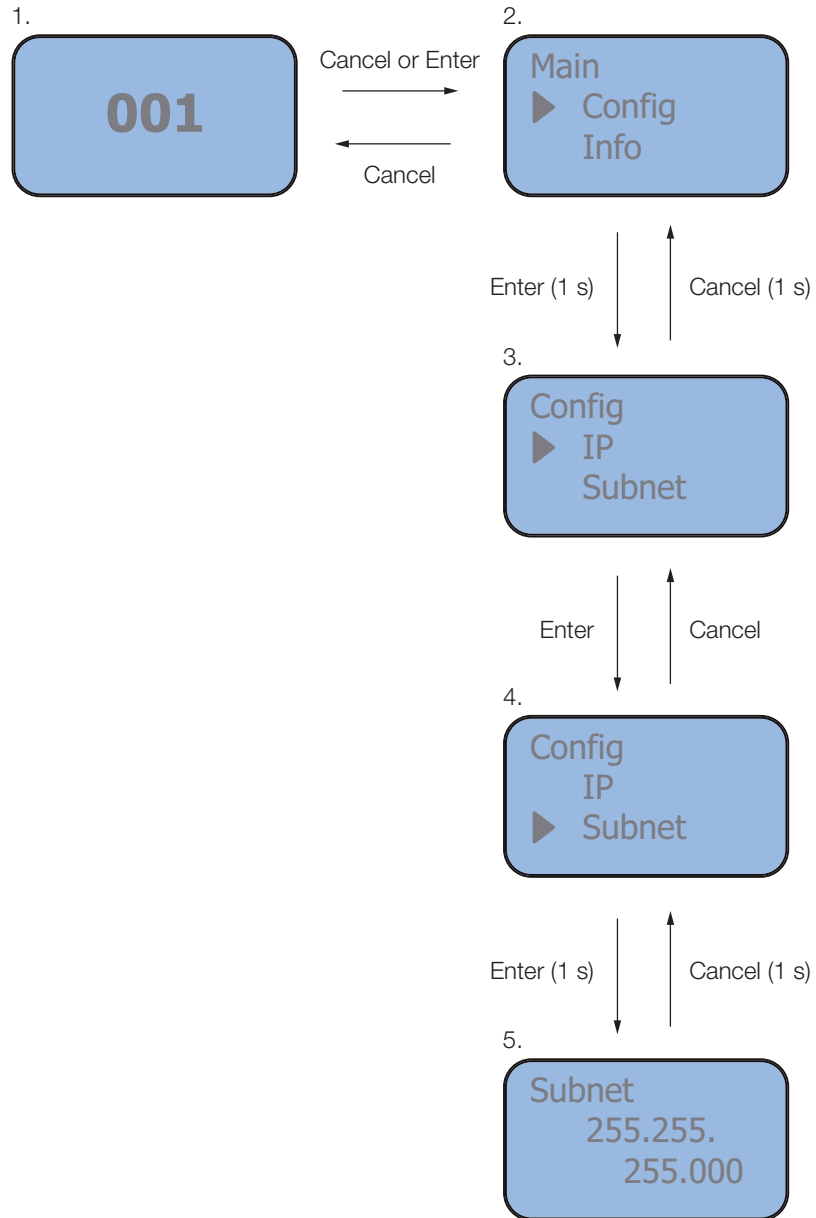


## 7 Device Functions

### View the Gateway Address

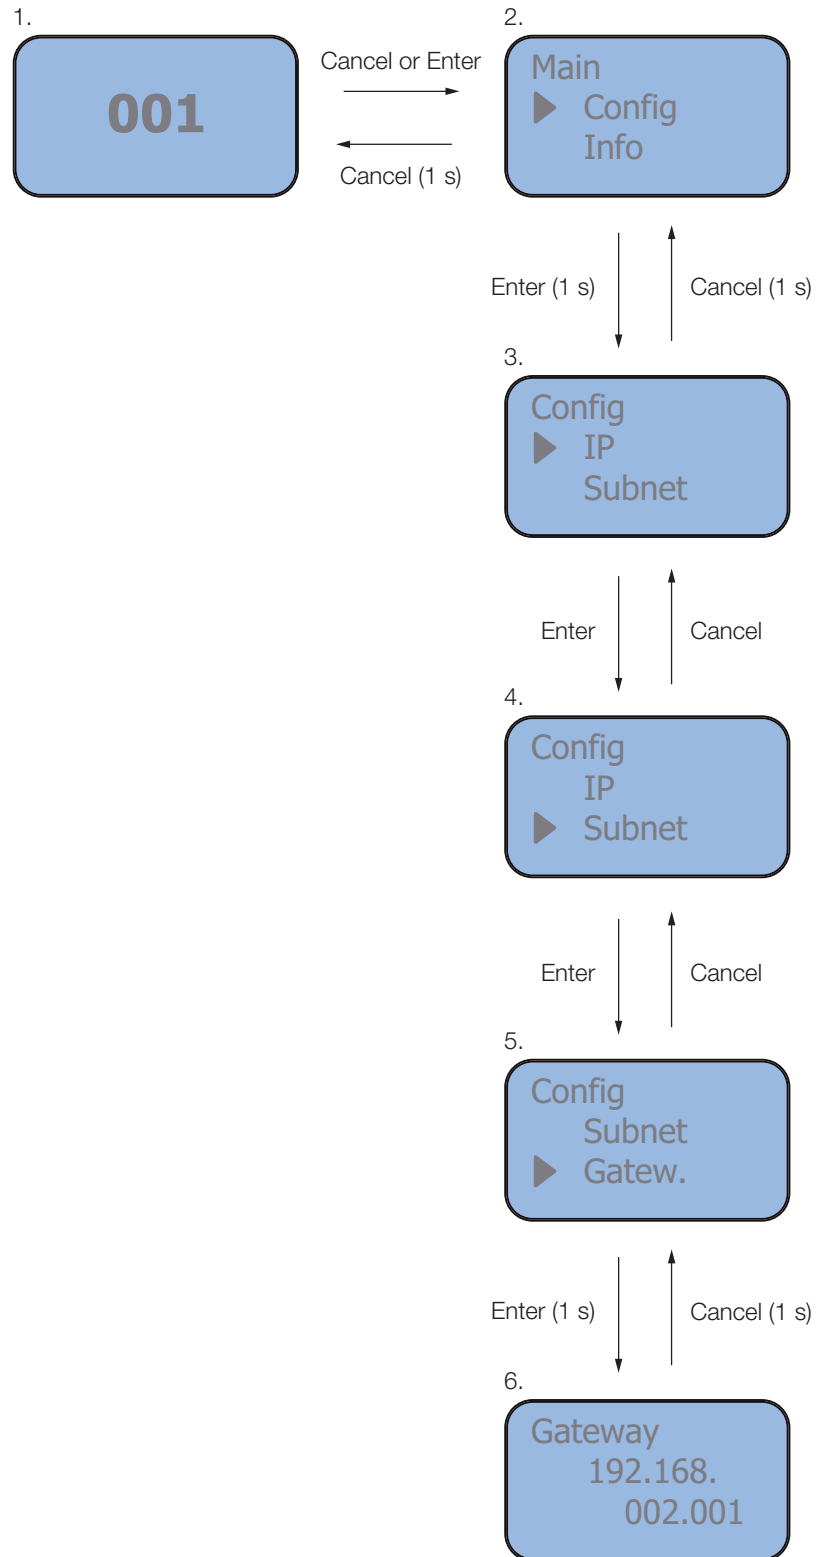

## 7 Device Functions

View the Station Name

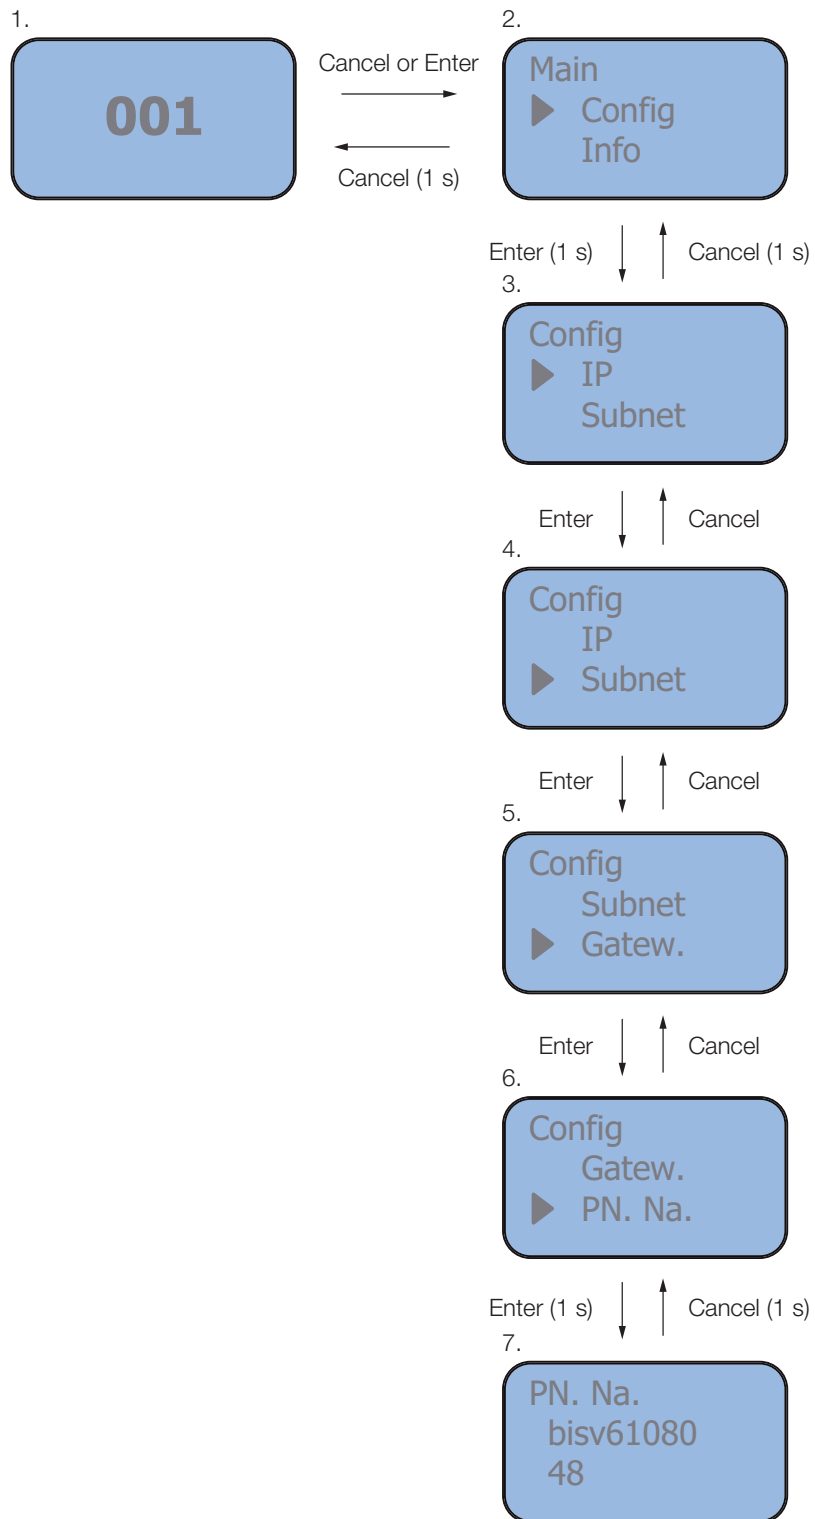

## 7 Device Functions

### 7.6 Webservice

The BIS V PROFINET IO device includes an integrated webservice for retrieving detailed information on the current status. Additionally, this can be used to reset the device settings and for setting parameters for IO-Link.

For connection setup with the webservice, enter the IP address of the module in the address line of the browser. Please use Internet Explorer 7 or higher.

#### Home

Information on the configuration and network activity of the module can be found on this page. The navigation bar appears in the upper area of the window, which allows you to switch between the various web pages. A click on the corresponding text is all it takes.



The screenshot displays the web interface for the BIS V-6108-048 module. At the top, there is a navigation bar with the following links: Home, Operation Process, Device Properties, Diagnostic Module, Configurations, and Contact. The main content area is titled "BIS V-6108-048 Basic Module Information". It is divided into three sections: "Module Information", "Network Configuration", and "Device Status".

Module Information	
Product Name:	BIS V-6108-048
Order Code:	BIS_V-6108
Module Description:	
Module Location:	
Firmware Revision:	1.0 (1.10)
Hardware Revision:	

Network Configuration	
Device name:	bisv6108048
IP Address:	192.168.1.2
Subnet Mask:	255.255.255.0
Gateway Address:	192.168.1.2
MAC Address:	00:02:A2:03:03:03
MAC Address Port 1:	00:02:A2:03:03:04
MAC Address Port 2:	00:02:A2:03:03:05
Link Speed Port 1:	100 Mbit/s
Link Speed Port 2:	100 Mbit/s

Device Status	
HMI Lock Status:	Off
Energy Safe Mode (LED):	Off

On the Home page the user will find all the key data and information about the BIS-V module. This is a read-only page. No changes or entries are possible on this page.

If information doesn't get updated automatically, use the Refresh button to reload the page.

Copyright © 2013 Balluff GmbH

**7** Device Functions

**Operation Process**

Information on the current process data and the port status of the device is visualized by LEDs on this page.  
 If an RFID R/W head or an IO-Link-device is connected to the respective ports, then additional information on the connected module will be displayed alongside the status information. Clicking on this text or the device port acts as a link that takes you to "Device Properties".

The screenshot displays the BALLUFF BIS V-6108-048 web interface. At the top, there is a navigation bar with links: Home / **Operation Process** / Device Properties / Diagnostic Module / Configurations / Contact. Below the navigation bar, the page title is "BIS V-6108-048" with the subtitle "Information about current process states".

The main content area features a central image of the device's port panel. The panel has several ports labeled: RD, SF, BF L/A L/A, H2, H1, H3, H4, and Power. Each port is associated with a BALLUFF model number: H1 and H2 are BALLUFF BIS VM-300; H3 and H4 are BALLUFF BIS VM-300; and the Power port is BALLUFF BIS M-400-045-001-07-54. The ports are shown with green and orange indicator lights.

To the right of the port image, there is a text block explaining the "Operation Process" page and a "Refresh" button. Below this, there are sections for "R/W Functions" and "IO Link Functions".

**R/W Functions:**

- RD:** Not Ready (green), Power (green), No Head (green)
- COM:** No Tag (green), Tag present (orange), Tag processed (orange)

**IO Link Functions:**

- Input characteristic:** 0 (green), 1 (orange), short circuit (red)
- Output characteristic:** 0 (green), 1 (orange), >Imax (red)
- IO Link:** Bus Off (green), Error (red), IO active (green), IO not active (green)

At the bottom right of the screenshot, there is a small copyright notice: "Copyright © 2013 Balluff GmbH".



**7** Device Functions

**Device Properties** The parameter settings of the selected module (R/W heads, IO-Link) are shown on this page. Every module can be selected individually (right side). IO-Link modules can also be configured using this page.




Home / Operation Process / **Device Properties** / Diagnostic Module / Configurations / Contact

**BIS V-6108-048**  
**BIS-V Device Properties (H1)**

Identification Data	
Vendor Name:	BALLUFF
Head Name:	BIS VM-300
Serial Number Head:	140116000027DE
Head Type:	M Head
Selected Tag Types:	All Types
Energy Safe Mode (LED):	Off
Energy Safe Mode (Slow Tag Search):	Off
Energy Safe Mode (Low Transceiver Power):	Off
CRC	Off
Dynamic Mode	Off
Head State:	Tag Present
HW Version:	0.01
FW Version:	1.20
Tag Type	E0080148613671BF

On the Device Properties page you can get information about the current status of the R/W heads and the IO-Link Port. If a R/W head or a device is connected you can choose the related port below and get information about the device. You can also configure the IO-Link Port on this page.

If information doesn't get updated automatically, use the Refresh button to reload the page.



**i Note**  
 The connected IO-Link module can be configured in this window. A suitable controller with the corresponding software is needed to configure the PROFINET device and the R/W ports, however.

7 Device Functions

Diagnostic Module

This page shows the current status of the module and the network, as it appears on the module.

**BALLUFF**  
sensors worldwide

BIS V

Home / Operation Process / Device Properties / **Diagnostic Module** / Configurations / Contact

**BIS V-6108-048**  
Information about current Module status

The Diagnostic Module page shows the head-module status. You can see the network and power supply statuses with the Module status LED's.

If information doesn't get updated automatically, use the Refresh button to reload the page.

Refresh

**LED functions overview:**

**RD**  
OK Low

**SF**  
No Error System Error GSP Service

**BF**  
No Error No loading No data transfer

**L/A**  
Link Link and activity No link activity

**Description**

RD	Sensor and Module Supply	Supply voltage is OK
SF	System fault	OK
BF	Bus fault	OK
L/A	Link/Activity Port 1	Data rate on Port 1 is "100 Mbit/s "
DM	Duplex Mode Port 1	Duplex Mode on Port 1 is"FULL"
L/A	Link/Activity Port 2	Data rate on Port 2 is "100 Mbit/s "
DM	Duplex Mode Port 2	Duplex Mode on Port 2 is"FULL"

Copyright © 2013 Balluff GmbH

## 7 Device Functions

### Configurations

The module description and module position of the BIS-V device can be edited on this page. The device settings can also be reset. This function can only be used after entering a username and password:

Username: Balluff  
Password: BISVPNT



The screenshot shows the 'Configurations' page for the BIS V-6108-048 module. The page header includes the Balluff logo and a navigation menu with items: Home, Operation Process, Device Properties, Diagnostic Module, Configurations, and Contact. The main content area is titled 'BIS V-6108-048' and 'BIS-V Module Configurations'. It is divided into two sections: 'General Information' and 'Reset to factory settings'. The 'General Information' section contains two text input fields for 'Module Description' and 'Module Location'. The 'Reset to factory settings' section includes a checkbox labeled 'Please confirm you want to reset the device.' and two buttons: 'Apply' and 'Reset'. A right-hand sidebar contains a note: 'On the Module Configurations page there is the ability to configure the BIS-V module. Network settings such as user specific information texts can be set on this page.' The footer of the page reads 'Copyright © 2013 Balluff GmbH'.

## 7 Device Functions

### Contact

This page shows the contact information.



The screenshot shows the Balluff website interface for the BIS V-6108-048 Processor Unit. At the top left is the Balluff logo with the tagline "sensors worldwide". To the right is a large image of the device with the text "BIS V" overlaid. Below the image is a navigation menu with links: Home / Operation Process / Device Properties / Diagnostic Module / Configurations / Contact. The "Contact" link is highlighted. Below the navigation is the product name "BIS V-6108-048" and the sub-heading "Contact". The main content area is divided into four columns representing different service centers: Headquarters, Global Service Center, US Service Center, and CN Service Center. Each column lists contact details for Germany, USA, and China. At the bottom right of the page, there is a small copyright notice: "Copyright © 2013 Balluff GmbH".

**BALLUFF**  
sensors worldwide

**BIS V**

Home / Operation Process / Device Properties / Diagnostic Module / Configurations / **Contact**


**BIS V-6108-048**  
Contact

Headquarters	Global Service Center	US Service Center	CN Service Center
<b>Germany</b> Balluff GmbH Schurwaldstraße 9 73765 Neuhausen a.d.F. Phone: +49 7158 173-0 Fax: +49 7158 5010 E-Mail: balluff@balluff.de	<b>Germany</b> Balluff GmbH Schurwaldstraße 9 73765 Neuhausen a.d.F. Phone: +49 7158 173-370 Fax: +49 7158 173-691 E-Mail: service@balluff.de	<b>USA</b> Balluff Inc 8125 Holten Drive Florence, KY 41042 Phone: (859) 727-2200 Toll-free: 1-800-543-8390 Fax: (859) 727-4823 E-Mail: technicalsupport@balluff.de	<b>China</b> Balluff (Shanghai) trading Co., Ltd. Room 1006, Pujian Rd. 145. Shanghai, 200127, P.R. China Phone: +86 (21) 5089 9970 Fax: +86 (21) 5089 9975 E-Mail: service@balluff.com.cn

Copyright © 2013 Balluff GmbH

**Appendix**

**Type Code**

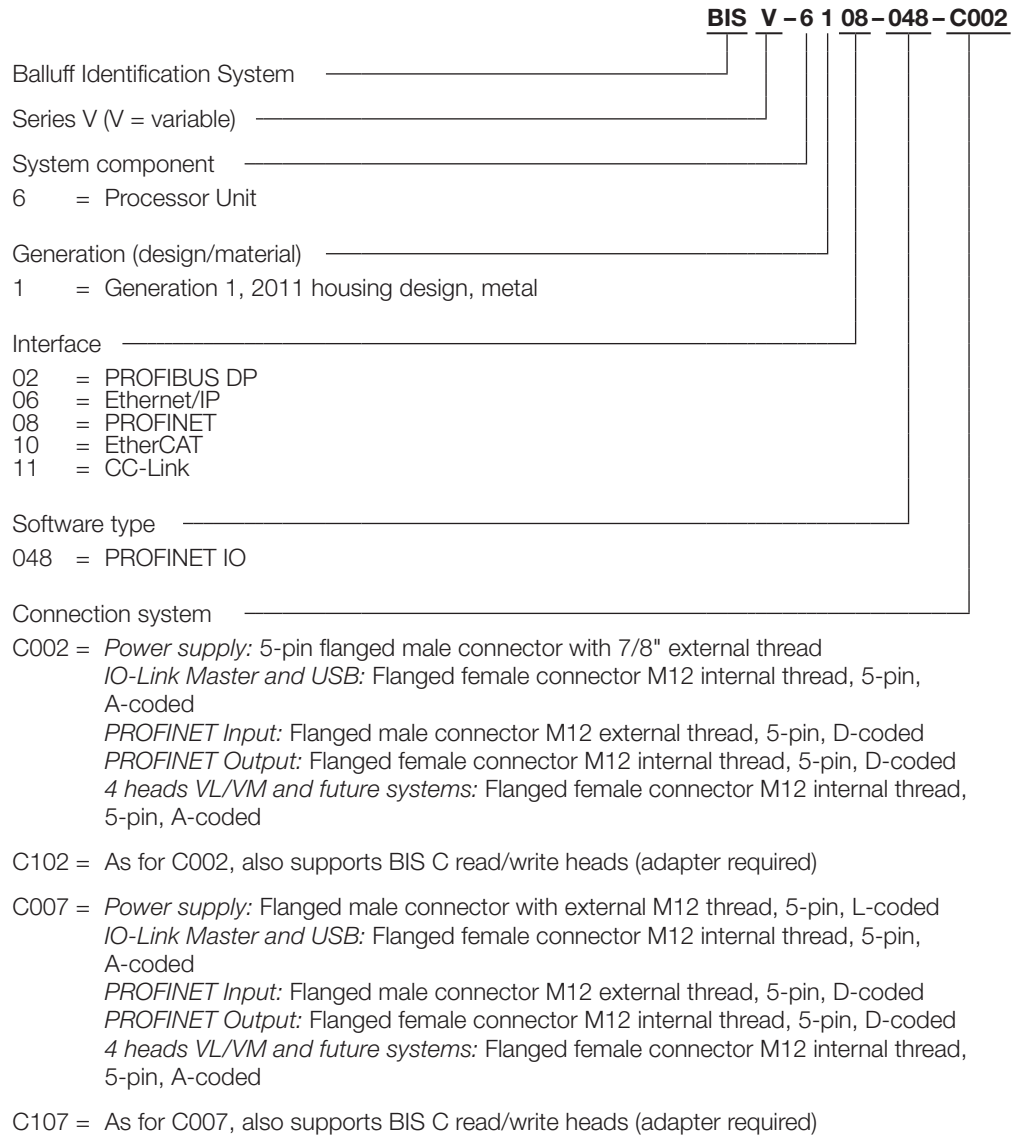

**Accessories  
 (Optional, not  
 included with  
 delivery)**



**Note**

More accessories for the BIS V-6108-\_\_ can be found in the Balluff BIS catalog and at [www.balluff.com](http://www.balluff.com).

**Appendix**

**ASCII Table**

Decimal	Hex	Control Code	ASCII	Decimal	Hex	ASCII	Decimal	Hex	ASCII
0	00	Ctrl @	NUL	43	2B	+	86	56	V
1	01	Ctrl A	SOH	44	2C	,	87	57	W
2	02	Ctrl B	STX	45	2D	-	88	58	X
3	03	Ctrl C	ETX	46	2E	.	89	59	Y
4	04	Ctrl D	EOT	47	2F	/	90	5A	Z
5	05	Ctrl E	ENQ	48	30	0	91	5B	[
6	06	Ctrl F	ACK	49	31	1	92	5C	\
7	07	Ctrl G	BEL	50	32	2	93	5D	]
8	08	Ctrl H	BS	51	33	3	94	5E	^
9	09	Ctrl I	HT	52	34	4	95	5F	_
10	0A	Ctrl J	LF	53	35	5	96	60	`
11	0B	Ctrl K	VT	54	36	6	97	61	a
12	0C	Ctrl L	FF	55	37	7	98	62	b
13	0D	Ctrl M	CR	56	38	8	99	63	c
14	0E	Ctrl N	SO	57	39	9	100	64	d
15	0F	Ctrl O	SI	58	3A	:	101	65	e
16	10	Ctrl P	DLE	59	3B	;	102	66	f
17	11	Ctrl Q	DC1	60	3C	<	103	67	g
18	12	Ctrl R	DC2	61	3D	=	104	68	h
19	13	Ctrl S	DC3	62	3E	>	105	69	i
20	14	Ctrl T	DC4	63	3F	?	106	6A	j
21	15	Ctrl U	NAK	64	40	@	107	6B	k
22	16	Ctrl V	SYN	65	41	A	108	6C	l
23	17	Ctrl W	ETB	66	42	B	109	6D	m
24	18	Ctrl X	CAN	67	43	C	110	6E	n
25	19	Ctrl Y	EM	68	44	D	111	6F	o
26	1A	Ctrl Z	SUB	69	45	E	112	70	p
27	1B	Ctrl [	ESC	70	46	F	113	71	q
28	1C	Ctrl \	FS	71	47	G	114	72	r
29	1D	Ctrl ]	GS	72	48	H	115	73	s
30	1E	Ctrl ^	RS	73	49	I	116	74	t
31	1F	Ctrl _	US	74	4A	J	117	75	u
32	20		SP	75	4B	K	118	76	v
33	21		!	76	4C	L	119	77	w
34	22		„	77	4D	M	120	78	x
35	23		#	78	4E	N	121	79	y
36	24		\$	79	4F	O	122	7A	z
37	25		%	80	50	P	123	7B	{
38	26		&	81	51	Q	124	7C	
39	27		'	82	52	R	125	7D	}
40	28		(	83	53	S	126	7E	~
41	29		)	84	54	T	127	7F	DEL
42	2A		*	85	55	U			

**Index**

**A**

Abmessungen 15  
Accessories 105  
ASCII Table 106

**B**

Bus Connection 9

**C**

Checksum 25  
Communication  
  Basic sequence 70  
Control bit  
  Code Present 35  
  Default state 34  
  Head error 35  
  Job 34, 70  
  Job End 35, 70  
  Job Error 35  
  Job Start 35, 70  
  Toggle Bit In 34, 70  
  Toggle Bit Out 35, 70  
Control Function 8  
CRC check 25, 26

**D**

Data Integrity 8  
Display elements 74  
Double Bit Header 8  
Dynamic mode 26

**E**

Electrical Connections 12  
Electrical Data 15

**I**

Input buffer 35, 36  
  Bit Header 35  
Intended Use 6  
IP Address 17  
  AnyBus IPconfig 17  
  DHCP 17

**M**

Mechanical Data 15

**O**

Operating conditions 16  
Operating Principle 7, 11, 33  
Output buffer 34  
  Bit Header 34

**P**

Processor Unit  
  Communication 70  
  Display elements 74  
  Input buffer 35, 36  
  Operating Principle 33  
  Output buffer 34  
  Total Buffer 33  
Product Description 7, 10, 11

**R**

Read times 70, 72  
Read/write head  
  Generate default state 83  
  turn-off 83

**S**

Safety 6  
  Installation 6  
  Operation 6  
  Startup 6

**T**

Technical Data  
  Electrical Data 15  
  Mechanical Data 15  
  Operating conditions 16  
Technische Daten  
  Abmessungen 15  
Total Buffer 33  
Type Code 105  
Type, serial number 27

**W**

Write times 72

 **www.balluff.com**

**Headquarters**

**Germany**

Balluff GmbH  
Schurwaldstrasse 9  
73765 Neuhausen a.d.F.  
Phone + 49 7158 173-0  
Fax +49 7158 5010  
balluff@balluff.de

**Global Service Center**

**Germany**

Balluff GmbH  
Schurwaldstrasse 9  
73765 Neuhausen a.d.F.  
Phone +49 7158 173-370  
Fax +49 7158 173-691  
service@balluff.de

**US Service Center**

**USA**

Balluff Inc.  
8125 Holton Drive  
Florence, KY 41042  
Phone (859) 727-2200  
Toll-free 1-800-543-8390  
Fax (859) 727-4823  
technicalsupport@balluff.com

**CN Service Center**

**China**

Balluff (Shanghai) trading Co., ltd.  
Room 1006, Pujian Rd. 145.  
Shanghai, 200127, P.R. China  
Phone +86 (21) 5089 9970  
Fax +86 (21) 5089 9975  
service@balluff.com.cn